

newline

Elara(Q+ series)

User Manual Extended



V1.0

Please keep this Manual properly for future reference!

This manual is a general manual, the pictures are for reference only, please refer to the real product.

Contents

About This Document	01
Safety Instruction	02
1.Overview	06
1.1 Introduction	06
1.2 Parts	06
1.3 Ports	08
1.4 Front Buttons	11
1.5 Remote Control	12
2.Installation Guide	13
2.1 Safety Precautions	13
2.2 Installation Precautions	14
2.3 Installation	16
2.4 Installing the Wi-Fi Module	17
2.5 Installing the Camera(Optional)	18
2.6 Installing the OPS (Optional)	18
2.7 Installing the SDM-S (Not included)	19
3.Getting Started	20
3.1 Power On	20
3.2 Power Off	20
3.3 Calibration	23
4.Operating the Touch Screen	26
4.1 Profile Log-on	26
4.2 Home	27
4.3 OPS	31
4.4 Sources	31
4.5 Whiteboard	32
4.5.1 Whiteboard Functions	35
4.5.2 Whiteboard Setting	41
4.5.3 Page Operations	43
4.6 Annotation	46
4.7 Tutorial	48
4.8 Tool bar	48
4.9 Gadget	50

4.9.1 Newline Cast	52
4.9.2 Newline broadcast	53
4.9.3 Newline App Store	53
4.9.4 Newline display management+	54
4.9.5 File Management	54
4.9.5.1 File Viewer Page	54
4.9.5.2 File Preview	55
4.9.5.3 File Search	55
4.9.5.4 File Filtering	56
4.9.5.5 New Folder	56
4.9.5.6 File Operation	56
4.9.5.7 File Name	57
4.10 System Settings	57
4.10.1 Network	58
4.10.2 Connected devices	58
4.10.3 Language & Input	59
4.10.4 Date & Time	60
4.10.5 Sounds	61
4.10.6 Storage	62
4.10.7 Apps	62
4.10.8 Display & Theme	63
4.10.9 Tool Bar	63
4.10.10 Input and Output Setting	64
4.10.11 Power Setting	65
4.10.12 Screen Eye Filters	67
4.10.13 System	67
4.11 Save Session	76
4.12 Automatically Power Off	76
5 Add Shortcut	77
5.1 Add Shortcuts to Dock	77
5.2 Delete Shortcuts	78
5.3 Launcher edit name	78
5.4 Newline Assistant	79

5.4.1 Introduction.....	79
5.4.2 Installation.....	79
5.4.3 Add Quick Start Windows Programs in Smart System.....	79
6.Quick Setting Menu	81
7.Serial Port Control.....	83
8.FAQs & Troubleshooting.....	89
9.Specifications.....	92

Welcome to the world of **NEWLINE**.

Thank you for choosing the Newline Q+ series Interactive Flat panel display. Please use this document to get the most out of your screen.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The symbol of the crossed out wheeled bin indicates this product should not be placed in municipal waste. Instead, dispose of waste equipment by taking it to a designated collection point for electrical and electronic equipment recycling.






About This Document

.....






This document describes multiple functions, instructions, and notes about the product.

Symbols are used in this document to indicate operations that need particular attention. The symbols are defined as follows





 NOTE	Provides additional information to supplement operation in the main text.
 CAUTION	Indicates a potentially hazardous situation that, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results.
 WARNING	Indicates a hazard with risk that, if not avoided, could result in death or injury.

Safety Instruction



For your safety, please read the following instruction before you use the product. Serious injury or property damage may be caused by improper operations. Do not try to repair the product on your own.

 WARNING	
	<p>Disconnect the product from the power supply immediately if major failures occur.</p> <p>Major failures include the following:</p> <ul style="list-style-type: none"> • If smoke, a peculiar smell or an abnormal sound is discharged from the product. • No image or sound is displayed, or the image error occurs. <p>In the preceding scenarios, do not continue to use the product. Disconnect power supply immediately and contact professional staff for troubleshooting.</p>
	<p>Do not drop any liquids, metal or anything combustible onto the product.</p> <ul style="list-style-type: none"> • If any liquid or metal are dropped onto or into the product, power off the product and disconnect the power supply, then contact professional staff for solutions. • Pay attention to children when they are close to the product. <p>Put the product on a stable surface.</p> <p>An unstable surface includes, and is not limited to an inclined plane, a shaky stand, desk or platform, that might cause the product to turnover and be damaged.</p>
	<p>Do not open the panel or change the product on your own.</p> <p>High voltage components are installed in the product. When you open the panel, high voltage, electric shock, or other dangerous situations may occur.</p> <p>If inspection, adjustment, or maintenance is required, contact the local distributor for help.</p>
	<p>Use the provided power supply.</p> <ul style="list-style-type: none"> • To prevent the product from being damaged, do not use any types of power cables other than the one provided with the product. • Use a three-wire socket and ensure that it is properly grounded. • Pull out the power plug from the socket if the product is not used for a long period. <p>Clean the power plug regularly.</p> <ul style="list-style-type: none"> • Fire or electric shock may be caused if the product is powered on while you are cleaning. • Pull out the power plug before cleaning it with a dried cloth. <p>Power output port is 5V/2A.</p> <p>The voltage/current of the rear power output port is 5V/2A (maximum). Purchase the power code/AC adapter according to customer needs. The port can be used for the Newline X10D Android box. Please do not connect any products with different power requirement. Otherwise, it may cause damage to products or fire.</p>

⚠ WARNING

	<p>Do not put items on the top of the product.</p> <ul style="list-style-type: none"> Do not put items, such as a container for liquid (a vase, flowerpot, cosmetics or liquid medicine) on the top of the product. If any water or liquid is spilled on the product, the product may short circuit cause fire or electric shock. Do not walk on or hang any items on the product.
	<p>Do not install the product in an improper place.</p> <ul style="list-style-type: none"> Do not install the product in humid places, such as the bathroom, the shower room, near windows, or outdoor environments that experience rain, snow, or other harsh weather. Avoid installation near hot spring vapor. The preceding environments may cause faults in the product or electric shock under extreme conditions. Do not put an exposed fire source, such as a lit candle on the product.
	<p>Pull out the power supply during thunderstorms.</p> <ul style="list-style-type: none"> Do not touch the product during a lighting storm, you may experience an electric shock. Install or place components that supply high enough voltage to cause personal injury out of the reach of children.
	<p>Do not touch the power cable with wet hands.</p>

⚠ CAUTION

	<p>Do not install the product in high temperature environments.</p> <ul style="list-style-type: none"> Do not install the product near a heat source, such as a radiator, a heat reservoir, a stove or other heating products. Do not expose the product to direct sunlight, which may cause high temperatures and subsequent faults in the product.
	<p>When transporting the product:</p> <ul style="list-style-type: none"> Pack the product for transport or maintenance by using the cartons and cushioning material provided with the product. Move the product vertically during transport. The screen or other components are easily broken if the product is moved in an improper way. Before you move the product, disconnect all external connections and separate all topple preventing products. Move the product carefully to prevent it from being hit or squeezed, especially the screen, which may cause injury if broken.

⚠ CAUTION



Do not cover or block up any vents on the product.

- Any overheated components may cause fire, damage the product, and shorten the service life.
- Do not lay the product down in a way where the venting surface will be covered.
- Do not install the product on carpet or cloth.
- Do not use a cloth such as table cloth to cover the product.

Keep the product away from the radio.

The product complies with the international EMI standard to prevent radio interference. However, interference may still exist and causes noise in the radio. If noise occurs in the radio, try the following solutions.

- Adjust the direction of the radio antenna to avoid the interference from the product.
- Keep the radio away from the product.

If the screen glass is broken or falls off.

- Keep all personnel 10 feet away from the screen to ensure safety.
- Do not perform any installation or disassembly while the screen glass is broken or has fallen off.



Use the battery correctly.

- Galvanic corrosion, electric leakage, and even fire may be caused by improper battery usage.
- It is recommended to use the designated type of battery and install the battery by the correct electrodes (positive and negative).
- Do not install and use a new battery with a used one.
- Take out the battery if the remote control is not used for a long period.
- Do not expose the battery to overheated environments, such as sunlight and or heat sources.
- Dispose of the used battery based on your local regulations.

Do not damage the power cable.

- Do not damage, change, twist, bend, or forcibly drag the power cable.
- Do not put weights (such as the product itself) on the power cable.
- Do not forcibly drag the cable when you pull out the power plug. If the power cable is damaged, please contact the local distributor to repair or replace it.
- The power cable in the accessory box is for this product only. Do not use it on other products.

CAUTION



Additional advice:

- Use the product in an environment with comfortable lighting. It is harmful to your eyes to watch in a too bright or too dark environment.
- Relax your eyes watching for a period of time.
- Keep sufficient distance from the product to protect your eyes and prevent eyestrain.
- Adjust the volume to an appropriate level, especially at night.

About USB port.

Front USB ports and rear USB 3.0/USB 2.0 ports switch connections based on signal sources. If the current signal source is reading the data from an external product connecting to the port, please switch the signal source after the data reading is complete. Otherwise, the data or product may be damaged.

1

Overview

1.1 Introduction

Take collaboration to the next level with the Q+ series interactive display.


Increase productivity and collaboration across the board with a display that uses advanced touch technology.

Each product can be customized to fit your needs. The non-proprietary nature lets you use the software you prefer, take notes on local files, wirelessly cast to the panel from smaller devices, run your favorite apps, and view multimedia files, all while making your experience better than before.

The newline's 4K Ultra High-Definition LED screen also provides a fluid writing experience. Annotate over anything on the screen, whether in the embedded whiteboard or while using any other device. Intelli-Touch automatically identifies pen thickness and color, saving you time.


1.2 Parts

● Front View

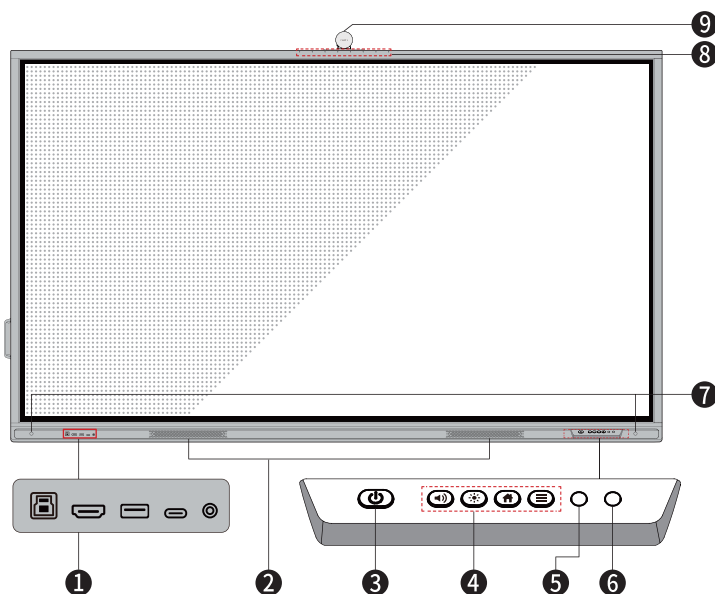


● **Rear View**

65"

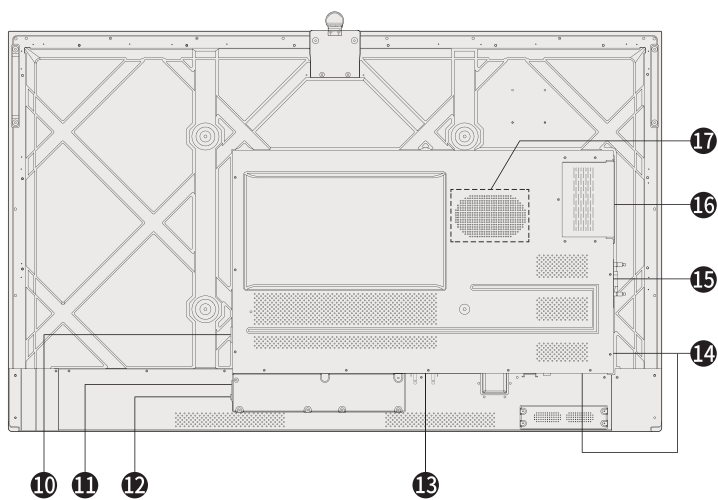

75" /86"

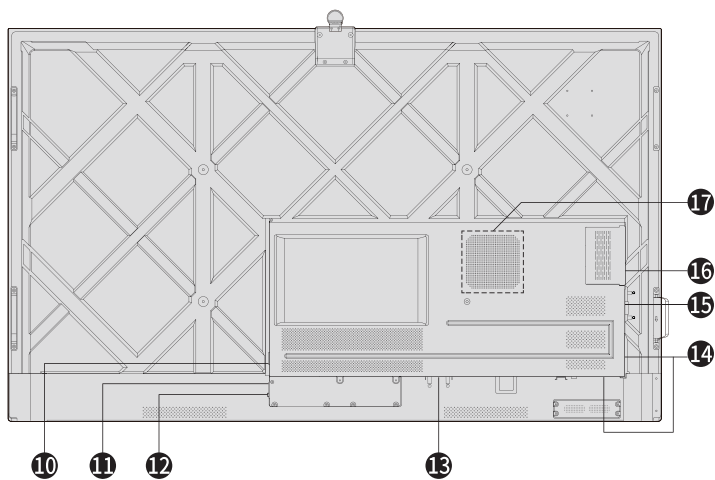

❶	Front Ports	❿	Power Output Plug
❷	Speakers	⓫	Power Supply Plug
❸	Power On/Off	⓬	Power Switch
❹	Front Buttons	⓭	SDM-S Slot
❺	Remote Control Receiver	⓮	Rear Ports
❻	Light Sensor	⓯	Wi-Fi Module Slot
❼	Proximity Sensor	⓰	OPS Port
❽	Microphone	⓱	Woofer
❾	Camera		

Notes
































- SDM-S is Smart Display Module Small.
- The product images shown are for illustration purposes only and may not be an exact representation of the product.

1.3 Ports







CAUTION

- Front USB ports and rear USB 3.0/USB 2.0 ports switch connections based on signal sources. If the current signal source is reading the data from an external product connecting to the port, please switch the signal source after the data reading is complete. Otherwise, the data or product may be damaged.
- For USB use, USB 2.0 provides up to 500mA whereas USB 3.0 provides up to 900mA of power. Please make sure the USB flash drive is formatted to FAT32 before inserting into the panel.
- Please use the supplied cable in the accessory box or the HDMI association certified shielded cable to better ensure the signal quality.
- While HDMI and Display Port offer support for cables of varying lengths, the maximum cable length that Newline recommends for optimal performance is 3 meters (10 feet) for HDMI and 1.8 meters (around 6 feet) for Display Port. Using cable longer than recommended length may cause data loss and a negative impact to display quality.

 HDMI 1/2/3			 HDMI	
 HDMI Out			 HDMI In	
 Line Out			 Line In	
 SPDIF Out			 SPDIF In	
 Display port			 HDMI	
 RS232			 RS232	
 USB3.0 Touch	 USB Touch			 USB
 Type C/w PD	 Type-C			 Type C
 Public USB3.0	 USB3.0			
 MIC In				



    Or used to upgrade firmware 




Type C on top side



WARNING

The rear power output port is supplies 5 V/2 A (maximum) power. Please contact Newline to purchase the power AC adapter for powering external devices. Please do not connect any products which require power than listed. Doing so may cause injury or damage to the panel.

 1.4 Front Buttons



Buttons	Operations	Functions
	Short press	Power on • Solid white color : Display is on and working.
		Sleep mode • The red and white lights flicker alternately: Display enter Sleep mode.
	Long press for more than 2 seconds	Power off • Solid red color : Display is in shut down mode.
	Short press	Adjust the Volume.
	Long press for 5 seconds	Enable or disable the touch function. Notes: When the touch function is disabled, the Android system, external sources and multi-user channels will be in no-touch mode. If you tap the screen, it will display "The touch function is locked!"
	Short press	Adjust the Brightness.
	Short press	Go to the home page.
	Short press	Open the Quick Setting menu.
	Long press for 5 seconds	Activate/Exit the power button Lock Function.

Note

- Press **Volume + >Volume + >Volume - >Volume - > Left > Left > Right > Right** buttons on the Remote control to turn on/off the touch function.
- The power button on the front panel will be locked if you activate the power button lock. Long press button for 5 seconds to exit the lock.



 










1.5 Remote Control




CAUTION

Carefully read the following instructions before using the remote control to avoid possible faults:

- Do not drop or damage the remote control.
- Do not spill water or other liquids on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control directly under sunlight or near a heat source.

Buttons	Operations
	Power On/Off
	Go to the Home Page
	Directional Pad
	Confirm/OK
	Press once to freeze the current screen. Press again to exit freeze function
	Enter the Source Selection Page
	Return to Previous/Exit
	App switcher
	<ul style="list-style-type: none">• Open the Quick Setting menu on the embedded operating system.• Open the menu in Windows system.
	Take a Screenshot
	Press once to decrease the volume, long press to decrease the volume continuously
	Mute/Unmute Audio
	Press once to increase the volume, long press to increase the volume continuously

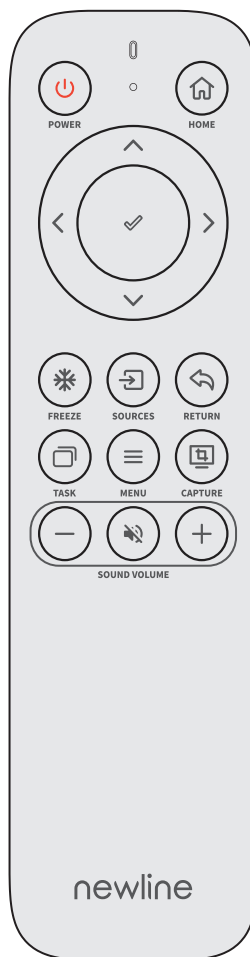

2


Installation Guide

2.1 Safety Precautions

● Installation Environment



● Installation Direction

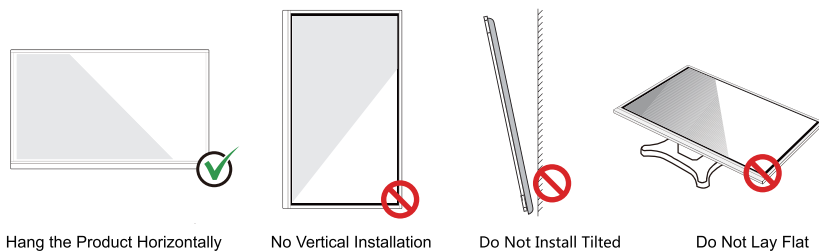

2.2 Installation Precautions

● Weight Loading

Weight of the product: 143lb/ 65kg (86INCH), 110lb/50 kg (75INCH), 86lb/ 39kg (65INCH)

- When using a mobile stand, ensure that the weight of the product is less than the loading capacity of the mobile stand.
- When using the wall-mount bracket, ensure that the wall can support the weight of the product. We recommend that the wall surface be reinforced and have a loading capacity 4 times of the weight of the product. Consult a professional installer for wall-mount installation.
- Attaching the VESA Mounting Bracket. This apparatus is intended to be supported by a GS Listed wall-mount bracket.


Note

The company does not undertake relevant legal responsibility for any problems caused by improper operation, if the third party mobile stand, or wall-mount bracket is beyond the scope of the product.

- Do not install the product where it might be hit by an opening or closing door.

● Vertical installation

When installing the panel, try to keep the panel vertical. An excessive tilt angle may cause damage to the glass or other internal components.

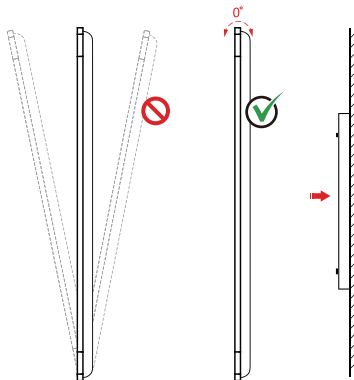


Note

For any problem, please contact our support desk. Our company is not responsible for any damage or losses incurred by users if the users fails to follow the instructions.

● Ventilation

Ensure adequate ventilation and/or an air conditioned environment. We recommend keeping certain distances from the side of the product to the wall or panels. Ventilation requirements are shown in following figure:

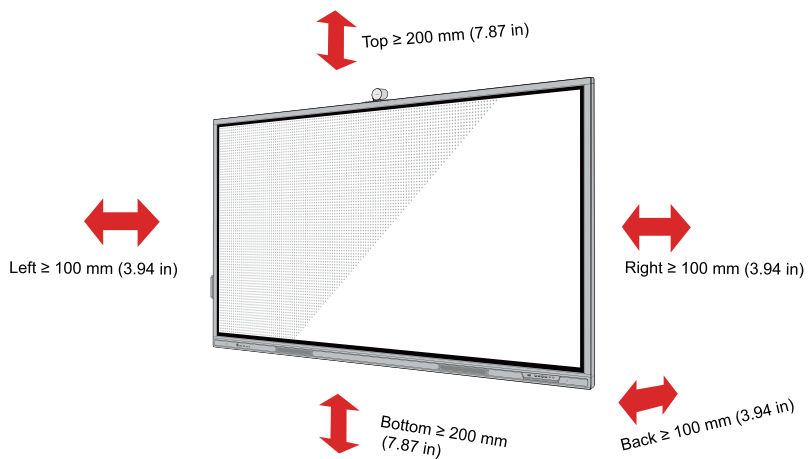


2.3 Installation

The dimensions of the four bracket mounting holes on the back panel are VESA MIS-F compliant (86 inch or 75 inch: 800 x 400 mm/31.50 x 15.75 in; 65 inch: 600 x 400 mm/23.62 x 15.75 in). Use metric M8 screws with a length of 10 mm to 15 mm (0.40 to 0.59 in) to secure the touchscreen to the mounting system. Dimensions of the mounting holes on the back panel are shown on the following figure:


Note

Consult a professional installer to install the display product.

65"

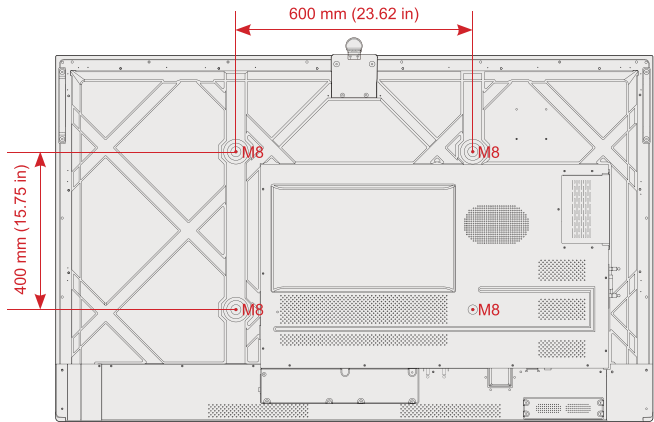

75"/86"

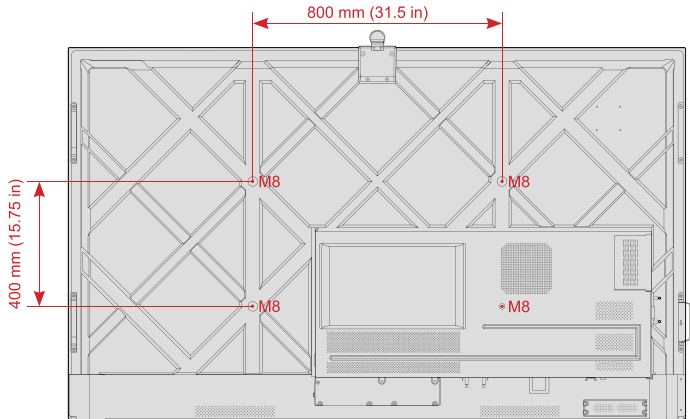

2.4 Installing the Wi-Fi Module




CAUTION



Wi-Fi Module does not support hot plugging. Therefore, you must insert or remove the Wi-Fi Module when the display is powered off. Otherwise, the panel display or Wi-Fi Module may be damaged.

The Wi-Fi Module is put in accessory box with an independent package, please install it onto panel referring to following steps.

Step 1: Unscrew the 2 screws on the Wi-Fi Module port and remove the shielding cover.

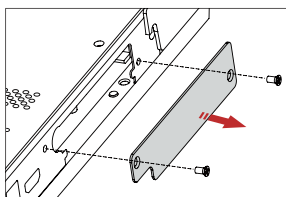


Step 2: Insert the Wi-Fi Module into the port on the rear of the panel until firmly seated, using the 2 screws to secure it.

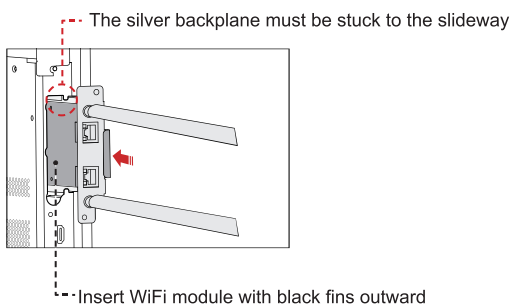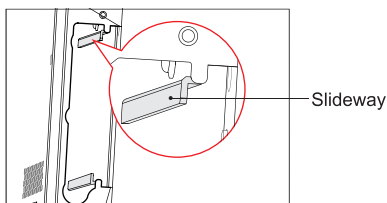

2.5 Installing the Camera(Optional)

The camera is put in accessory box with an independent package, please install it onto panel referring to following steps. Use two screws along with the camera to fix it. Remove the silicone cover from the middle port on the top of the panel display, then insert the camera. Install 2 fixing screws for secure purpose. Remove the front cover and start using.

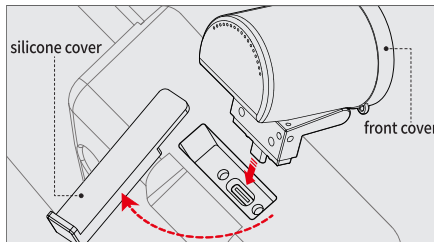

2.6 Installing the OPS (Optional)




CAUTION


The OPS does not support hot plugging. Therefore, you must insert or remove the OPS when the display is powered off. Otherwise, the display or OPS may be damaged.

You will need to purchase the OPS separately. Perform the following steps to install the OPS.

Step 1: Unscrew the M4 screws by hand to remove the OPS protective cover.

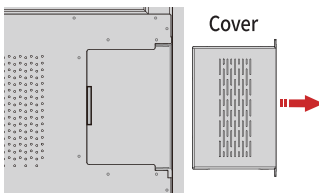

Step 2: Push the OPS into the OPS port on the rear of the panel until firmly seated, using the M4 screws to secure the OPS.

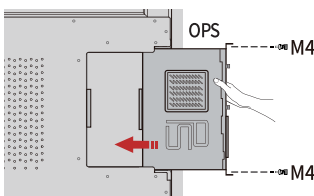


2.7 Installing the SDM-S (Not included)

CAUTION


The SDM-S does not support hot plugging. Therefore, you must insert or remove the SDM-S when the display is powered off. Otherwise, the display or SDM-S may be damaged.

Currently we don't provide SDM-S, but if you have a SDM-S to use, please install referring to the following steps.

Step 1: Unscrew the 2 screws on the SDM-S slot and remove the shielding cover.

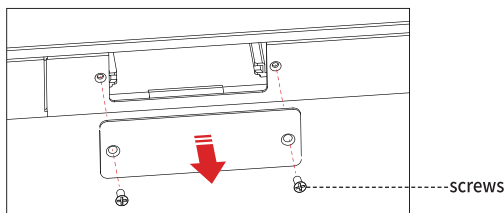

Step 2: Insert the SDM-S into the port on the rear of the panel until firmly seated, using the 2 screws to secure it.

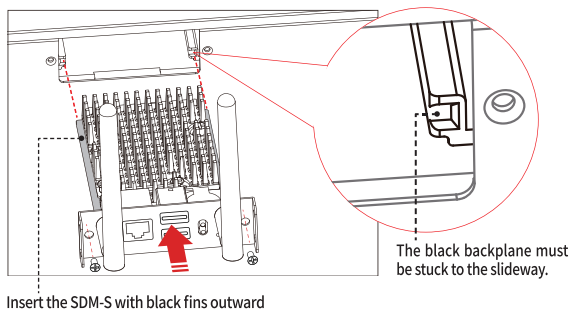

Note

Please install SDM-S first before you hang panel on the wall.

3

Getting Started


3.1 Power On

Step 1: Ensure the power cable is fully seated into the panel and wall outlet before powering on the panel. Please confirm your wall outlet supports a power range of 100V to 240V with frequency at 50 Hz/60 Hz \pm 5% and is fully grounded.

Note



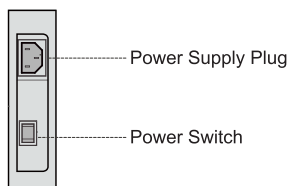

The power outlet should be installed near the equipment and should be easily accessible.


Step 2: Flip the power switch located on the side of the product to "I".




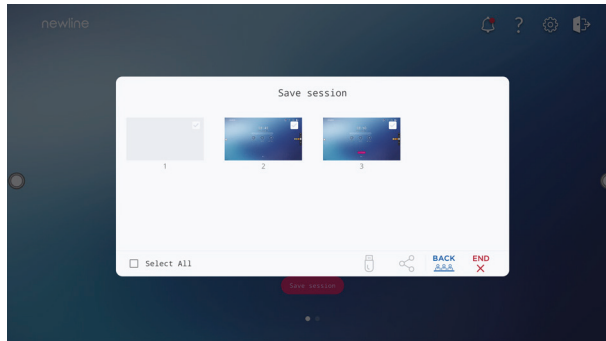
Step 3: Press the power button  on the front control panel or  on the remote control.


3.2 Power Off


Press the power button  on the front panel or the power button  on the remote control to enter sleep mode. Long press the power button  on the front panel or the power button  on the remote control to turn off the panel in the following situations:

Step 1: If there is no whiteboard data or screenshot(s), long press the power button  to power off the panel.

Step 2: If there is whiteboard data or screenshot(s), long press the power button  on the back panel or on the remote control. The **Save session** page will be displayed as shown in the following figure.




- In the **Save session** page, select your session documentations and then tap  icon, you can store your session documentations to the USB flash device. Then tap **END**, the **Warning** dialog box will be displayed as shown in the following figure.

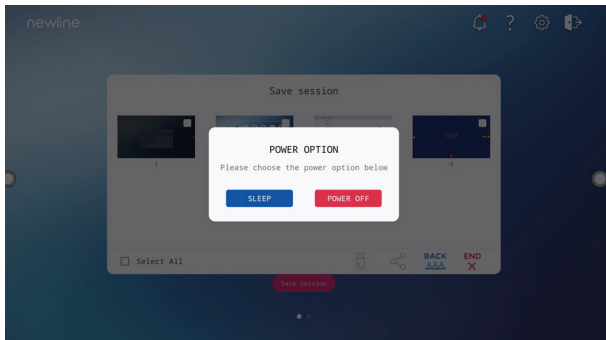

Note

Please store your session documentations before powering off the touch screen. Otherwise, the system will delete your session documentations after powering off.

- In the **Warning** dialog box, tap **POWER OFF** to turn off the display, and the power indicator will turn to red.

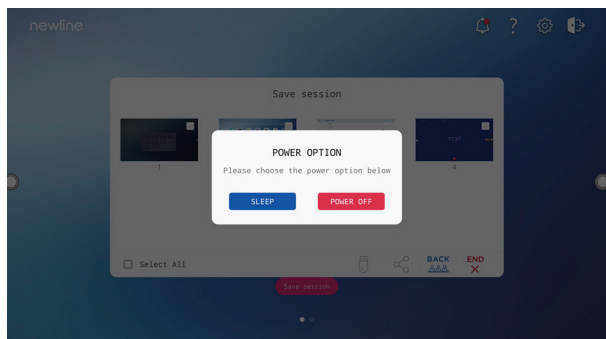

Step 3: If you want to completely turn off the panel, turn off the rocker switch behind the panel (next to the power socket) and unplug the power cord.

Notes

- When the panel display enters sleep mode or shutdown, the system will first detect whether the OPS Computer is turned off. If not, the system will first turns off the computer before entering sleep mode or shutdown.
- Please properly shut down the panel before disconnecting the power source or it may cause damage. Accidental power failure may cause damage to the panel.
- Do not repeatedly turn the power on & off in a short period of time as it may cause malfunction.

3.3 Calibration

If the cursor position has a big deviation from the actual touch point, calibration is used to eliminate the deviation. Calibration is required in the following scenarios:


- The OPS is used.
- A computer is connected through the HDMI or Display Port interface.

Note


Interface operation on the embedded operating system does not need positioning. External products with Microsoft Windows 7 or later versions will require positioning.

If the positioning is not correct, perform the following operations to calibrate again. The following takes Windows 10 as an example:

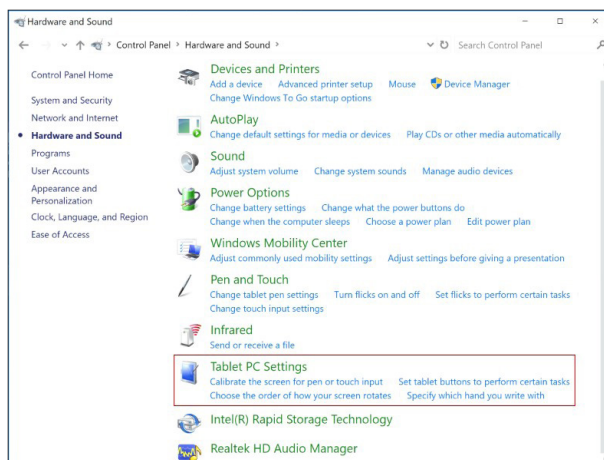

- Step 1: Ensure that the HDMI or DP interface and external products are connected properly.
- Step 2: Select the corresponding Windows signal from the signal source menu. The Windows page will be displayed.
- Step 3: Select **Tablet PC Settings** on the **Control Panel** page.

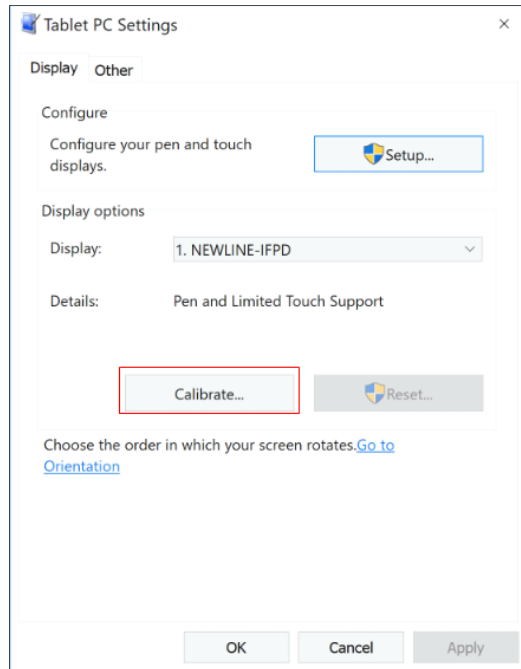


Step 4: Select “  Calibrate...” in the Tablet PC Settings window.




Step 5: Select **Touch input** from the option and start calibration.

Step 6: Use your finger or a pencil to click and hold the center of the flickering cross . Do not release until  moves to the next positioning point. Complete the calibration process as instructed.

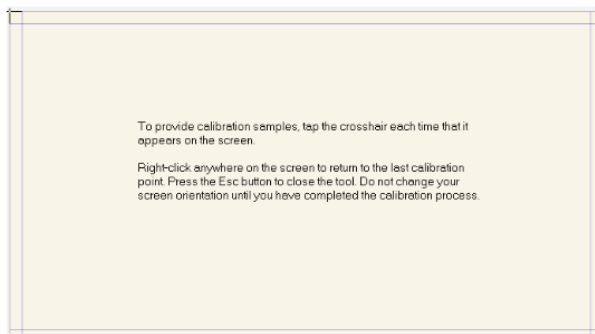

Step 7: After the calibration is complete, the **Digitizer Calibration Tool** dialog box will be displayed. Click **Yes** to save calibration data.

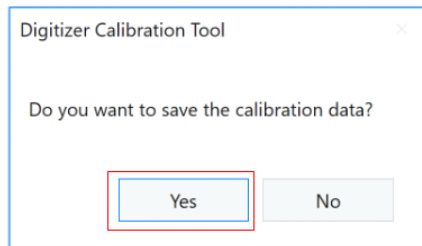

 **Tips:**

- To ensure writing accuracy, use the pencil or stylus included with the product for proper positioning.
- Positioning errors may cause failure of touch functions of the display. In that case, please perform calibration again.


Step 8: The **Tablet PC Settings** dialog box will be displayed again. Tap **OK**.
The calibration will be complete.


4



Operating the Touch Screen


4.1 Profile Log-on

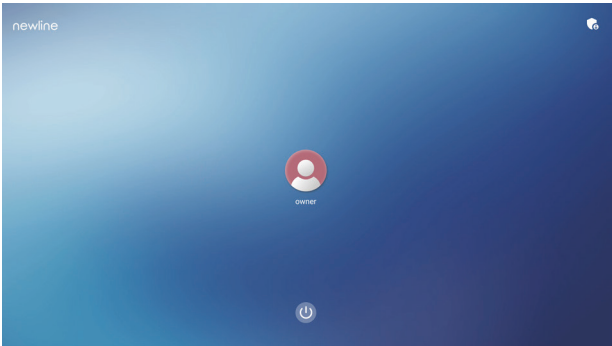When the panel is powered on, the panel will show all the registered accounts as shown in the following figure:



Tap the  icon to enter the 6 digits passkey which is set when you first time operating the panel, then you can log into the system homepage.

Tap the  icon to back to the previous page, you can tap **Change passkey** to change your passkey, tap  icon to make the system enter restart, sleep or power off state.

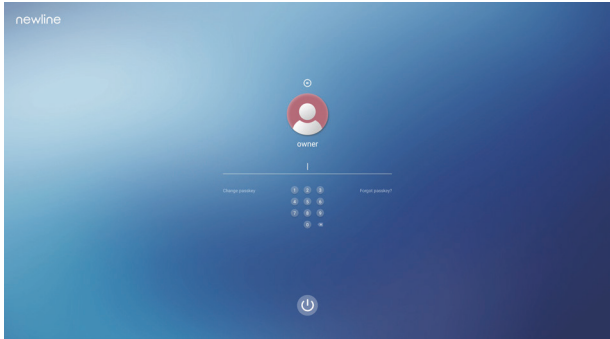


Notes

- The passkey is only limited to 6 digits, English letters are not allowed. After passkey enabled, every time you boot up the panel, the system will request the passkey.
- If you forgot your passkey, please contact your administrator to reset your passkey.

4.2 Home

Once logged into the system, the user will be taken to the **Home** page as shown in the following figure:

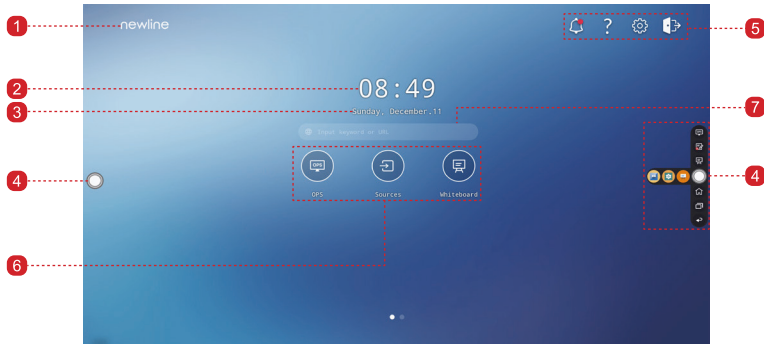

1 Logo (Shortcut to Settings)

5 Status Bar and Settings

2 Clock (Shortcut to Clock)

6 Main Icon (Dock)

3 Date and Week(Shortcut to Calendar)

7 Search Bar

4 Side Toolbar

Notes


On the Home page, swipe left to enter the gadget interface. Users can switch the interface between the Home and Gadget by sliding left and right.


• Shortcut for Logo & Wallpaper Settings

Tap the **newline** icon on the **Home** Page to enter the **Display & Theme** page, you can tap **Set logo** to set the logo image, as shown in the following figure:







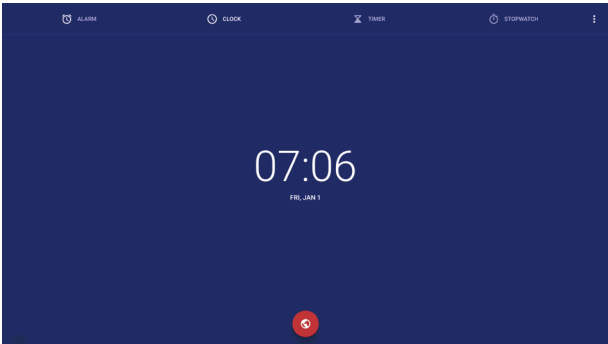








• **Shortcut for Clock**

 Tap the time icon on the **Home** page to start the clock application. Using the icons on the top, you may switch from clock mode to alarm mode, or to timer and stopwatch mode. In the clock mode, you may tap  to add other time zones as shown in the following figure:



• **Main Icon**

Icons	Functions
	Switch to the OPS Computer source.
	Click Sources to view the connected sources, including Built-in PC, HDMI 1, HDMI 2, HDMI 3, Type-C, Display, Newline cast, File viewer and SDM.
	Whiteboard takes you to the whiteboard function and screen annotation functions.
	Tap " Newline Cast " to enable the wireless screen sharing function.
	Tap File viewer to open the File Manager to explore internal and external files on the display.
	Tap Office viewer to open the Office Suite application.
	Switch to the HDMI 1 source.
	Switch to the HDMI 2 source.

Icons	Functions
	Switch to the HDMI 3 source.
	Switch to the Display source.
	Switch to Front Type-C source.
	Switch to SDM source.
	Long press the icons in the dock, you can enter the customization mode. Click Add to customize the icons or rename it. You can add up to 6 shortcuts to your favorite functions. (See more details in "Add Shortcuts to Dock")

Notes

Users can add or remove main icons as you need (OPS, Sources, whiteboard are defaults).
More details refer to [5.1 Add Shortcuts to Dock](#).


• Side Toolbar

OPS, Annotation Mode, Whiteboard, Home, Task manager and Return icons are displayed by default in the sidebar on both sides of the screen. Users can enter "Settings">"Tool Bar" to customize the sidebar icon.

You may hide sidebar in the Settings or move it on the screen, shrink or expand by using touch gestures.

Shrink

Expand

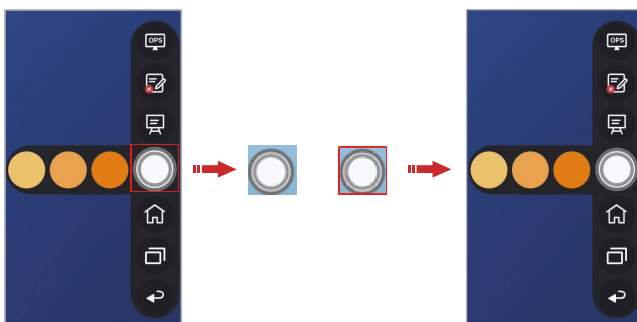






 
Toolbar > Floating bar

Press the toolbar and drag it out, the sidebar can be transformed into a floating bar.

In the floating bar, users can add and delete icons, add custom icons, and drag the floating bar with their fingers to move around on the screen. You can move the floating bar out of the screen to exit the floating mode.

 








The functions of the sidebar are as follows:

Icons	Functions
	Enter the OPS signal source.
	Enter annotation mode, and tap again to exit annotation mode and take a screenshot.
	Access whiteboard mode.
	Go to Home page.
	Manage currently running applications. Slide left/right to switch the currently running application or tap “ clear all ” at the upper right corner to clear all the applications.
	Return to the previous menu/Exit an app.

• Status Bar and Settings

The upper right corner of the home page displays working status icons (including USB drive(s), Ethernet, and Wi-Fi), Notification, Tutorial, system setting shortcut and log out icon.


Icons	Functions
	Tap to enter the Notification page (Show red dots when there is a new notification).
	If USB drive is connected to the USB port, this icon will appear.
	If the panel is connected to a wireless network, the icon will appear.
	If the panel is connected to Ethernet, the icon will appear.
	Access the tutorial page.
	Access the system setting page.
	Account log out and return to the lock screen.

4.3 OPS

On the Home Page, tap **OPS** to enter the OPS source, as shown in the following figure. If the display is not equipped with an OPS, "No Signal" is displayed.


 



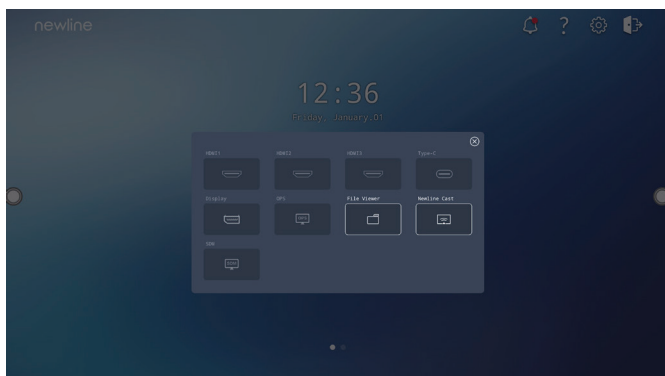
4.4 Sources

On the **Home** page, tap  to enter the signal source selection, including HDMI 1, HDMI 2, HDMI 3, Type C, Display port, OPS and SDM.

The icon without signal source connected is gray, and the icon with signal source connected is white. After you choose the white icon, the content of the signal source can be displayed in the preview window for real-time preview.

You can enter sources interface by the following methods:

- Tap the  icon on the home page;
- Tap the  icon on the quick settings;
- Tap the  icon on the remote control.



4.5 Whiteboard

The whiteboard function is designed to present conference writing to attendees in a quick and easy manner. The whiteboard has the following functions:

- **Discussion and screen annotation**

On the whiteboard page, you can select pen type, width, and color to write or annotate on the screen. You can also erase selected content or clear all content on the screen.

- **Page navigation**

Preview or delete pages.

- **Palm rejection**

When Palm rejection is turned on, fingers and pen can write and draw, but palm and fist would not be recognized.


- **Palm eraser**


When Palm eraser is turned on, fingers and pens can also be recognized, and palm and fist will be recognized as large eraser.



Note


The Palm Rejection and Palm eraser function are available for whiteboard and annotation application, both of which are mutually exclusive and cannot be turned off simultaneously. You can turn on/off Palm Rejection function on the whiteboard setting page.

• Whiteboard Mode

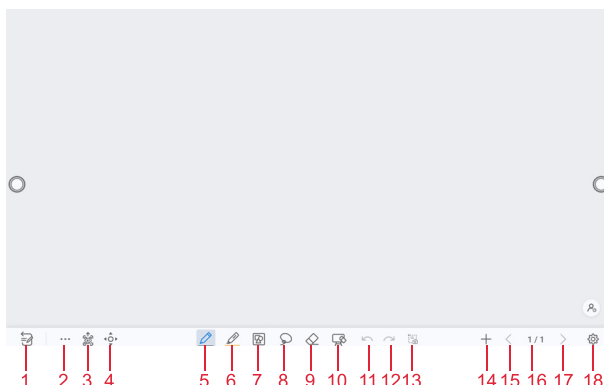- Tap **whiteboard** icon on the Home page or tap  on either side toolbar to enter the embedded whiteboard mode, as shown in the following figure:



- Tap  on the side toolbar or tap  in discussion mode to enter annotation mode. In annotation mode, a transparent layer lays over the screen, letting you write over whatever is on the screen until you exit annotation mode.

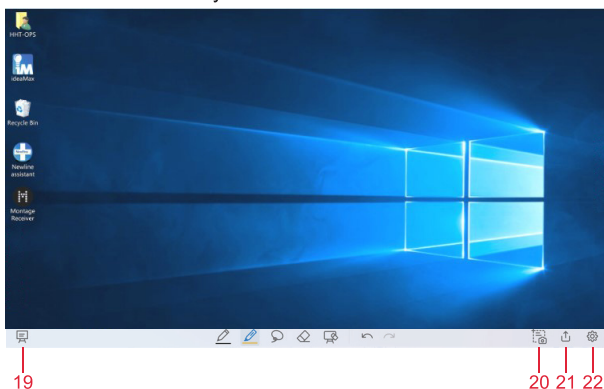

SN	Icon Name	Icon Function
1	Mode Switch	Tap to switch to annotation mode.
2	More	Tap to enter options interface. Users can insert image, Text, Sticky note, Search Image or Search Web etc.
3	QR Code	Tap to export the whiteboard data into QR Code.
4	Move Canvas	Tap to enter move canvas function, press and move your finger in the page to move canvas and content on it.


5	Pen	Tap to use the pen function, and the icon turns into blue. Tap and hold the icon for two seconds to set the size and color.
6	Highlighter	Tap to use the highlighter function, and the icon will turn blue. Tap and hold the icon for two seconds to set the highlighter size or color.
7	Insert Auto shape	Tap to enter the auto shape selection interface. Users can insert the shapes and set the shapes color.
8	Select	Tap to select and edit the whiteboard content. When the object is selected, users can move, zoom in/out, copy, cut, rotate, lock, change layer or delete object.
9	Eraser	Tap to select the eraser function and the icon will turn blue. Tap and hold the icon for two seconds to set the way of eraser.
10	Clear	Clear all data on this page.
11	Undo	Back to the previous step.
12	Redo	Tap to restore the action that was cancelled in the previous step.
13	Capture	Tap to take a screenshot.
14	New Page	Tap to add a new page.
15	Previous Page	Tap to back to the previous page.
16	Next Page	Tap to go to the next page.
17	Navigation	Tap to show the page thumbnails.
18	Settings	Tap to enter the whiteboard setting interface.
19	Mode Switch	Tap to switch to discussion mode.
20	Save	Tap to enter saving screenshot interface.
21	Screenshot	Tap to take a screenshot, and save the data to file viewer > picture > screenshot.
22	Settings	Tap to enter the annotation setting interface.

4.5.1 Whiteboard Functions

- **New Page and Settings**


- Create a new page

In discussion mode, tap **+** to create a new page. Up to 99 pages can be created. as shown in the following figure.

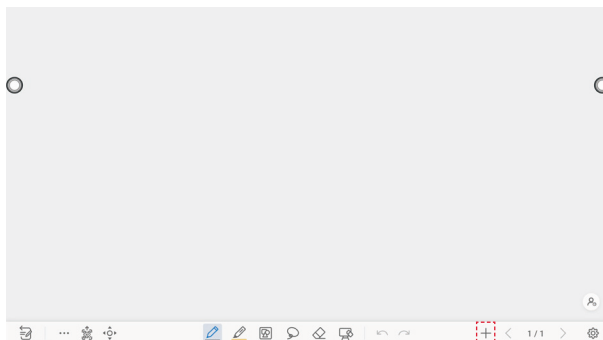


- Page settings

Tap and hold **+** for two seconds to enter the background setting. Select the color and pattern and click **ADD** to add a new page. The set color and pattern will be displayed on the new page, as shown in the following figure.

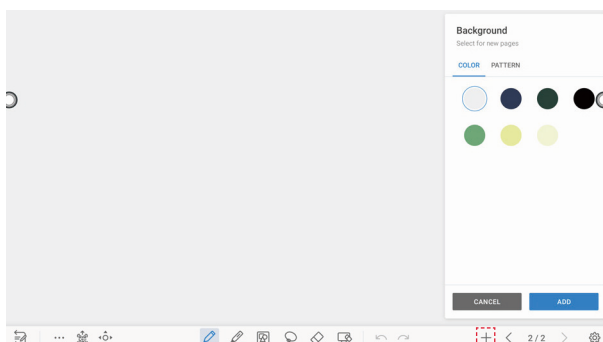


- **Mode Switch**


Tap  in the lower left corner of the whiteboard mode to switch to annotation modes.

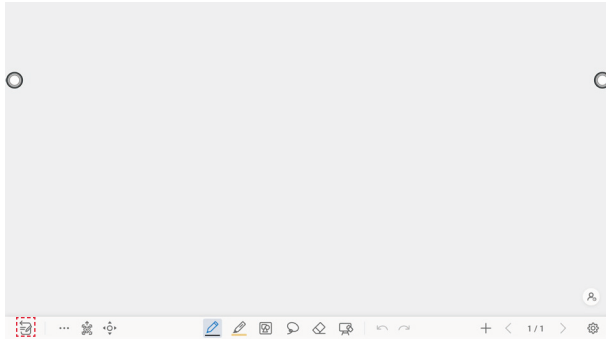


• Options

Tap the  icon to enter options interface. Users can manage files, add Text, Sticky note, Search Image or Search Web etc.


On the **FILE** items, you can import data from file management, save whiteboard files and export the whiteboard page.

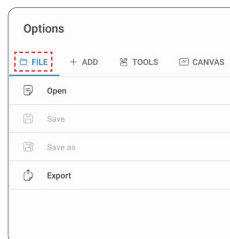


On the **ADD** items, you can import the pictures, Text, Sticky note, PDF document from system files, USB, network. You also can import the Search Image and Search Web on the internet.

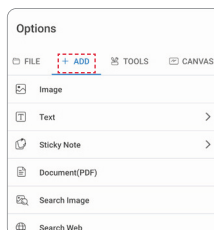


On the **TOOLS** items, you can use rulers to draw line or shape on the page, import the visualizer image etc.

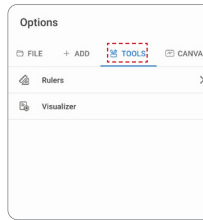


On the CANVAS items, you can set split mode to switch the screen display effect.

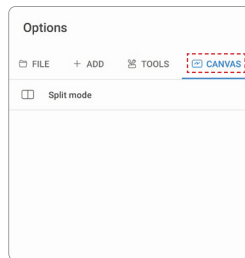


• QR code export

On the Whiteboard, tap  to pop up QR code exporting windows. You can export the whiteboard page into QR Code, before that, you can customize the number of export page, change the export format at first.

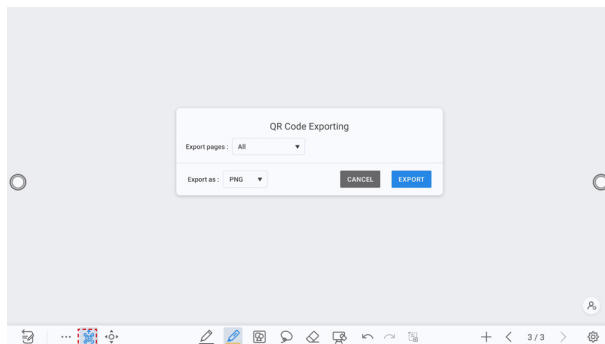




• Move canvas

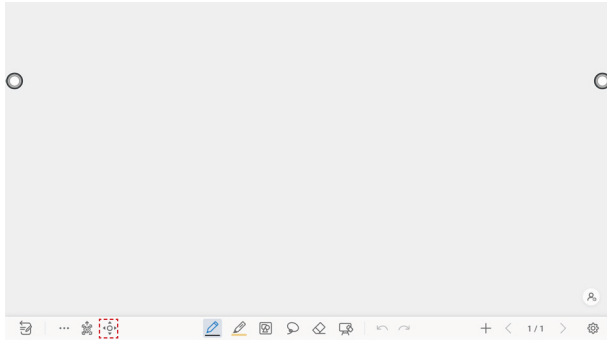On the whiteboard, tap the icon to enter move canvas function, press and move your finger on the page to move canvas or content on the page.






• Pen Type

On the Whiteboard, three types of pens are supported: hard pen, brush and highlighter.


- Pen  and  : used to write.
- Highlighter  : used to highlight. Characters covered by comments are still visible.

• Line Size and Color


On the Whiteboard, tap and hold  or  for two seconds to set the size and color. You can select the line size and color for writing, as shown in the following figure:

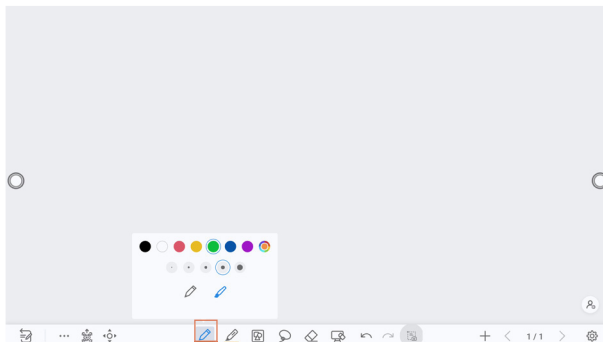

• Insert auto shape


On the Whiteboard, tap  to insert the shape or set the shapes and color.

Shapes: Circular, ellipse, square, equilateral triangle, right triangle, star, arrow, line.

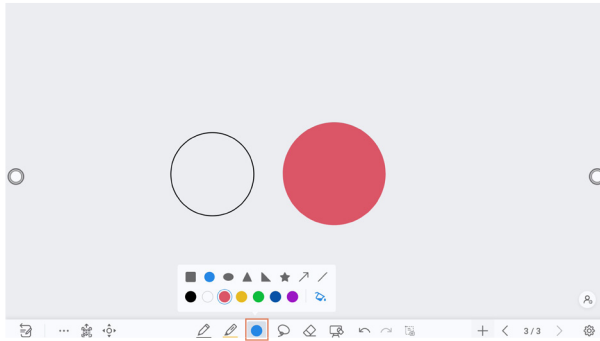


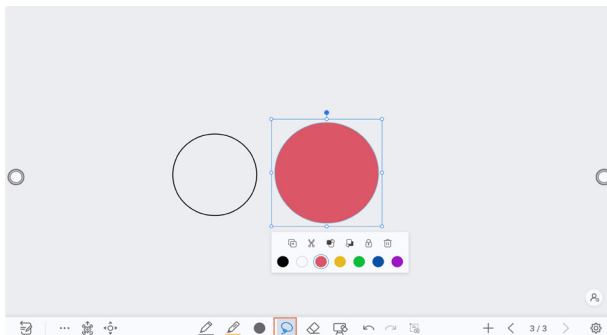
The  icon supports three status:

- Unavailable: The icon is unavailable when users insert arrow and line;
- Unselected: The edge of shapes are colored when the icon is not selected;
- Selected: the shape will be filled with colors when you import the shape.

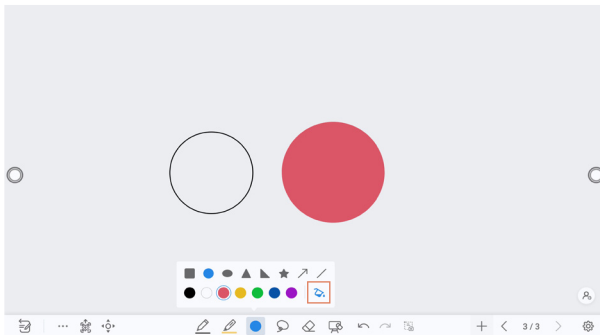


• Select

On the Whiteboard, tap  and user could choose the data on the page to move/ zoom in/ zoom out/ rotate/change colors.




Finger gesture

Rotate:

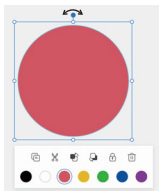

Zoom in/out:

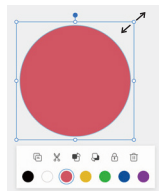


Icon	Functions
	Long press this icon to Rotate the selected items.
	Tap this icon to copy the items.
	Tap this icon to cut the items.
	Tap this icon to Push to top layer.
	Tap this icon to Push to bottom layer.
	Tap this icon to lock the layer.
	Tap this icon to delete the items.
	Paste (Long press the screen around two seconds. The icon will appear only after one item copied or cut)
	Tap this icon to unlock the layer. (The icon will appear only after one item locked)


• Eraser


Two methods are available to erase written errors or content as follows:

- Partial eraser: Tap to clear the passing part of eraser.
- Object eraser: Tap to clear the whole object.

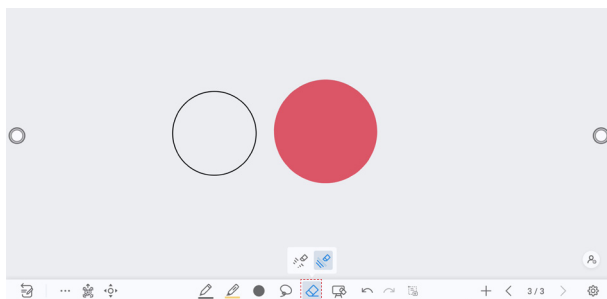


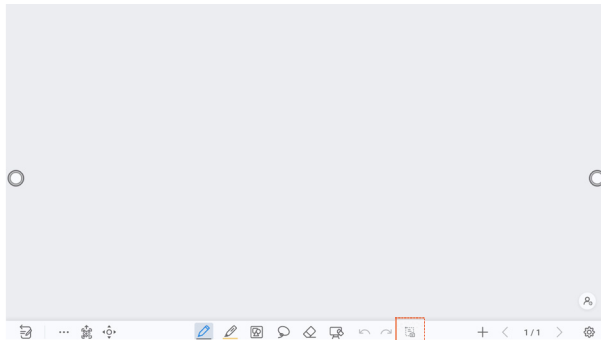
- **Clear All**

On the Whiteboard page, tap  to show the pop-up windows to clear all content on the current page, as shown in the following figure:

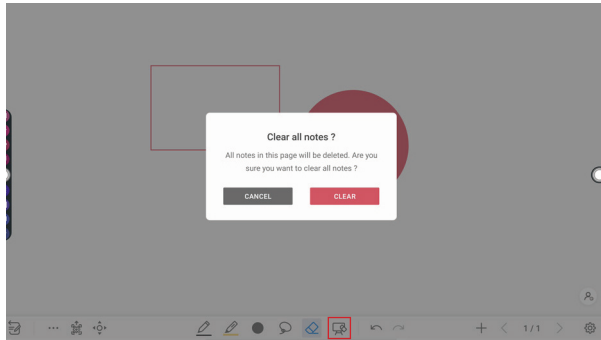


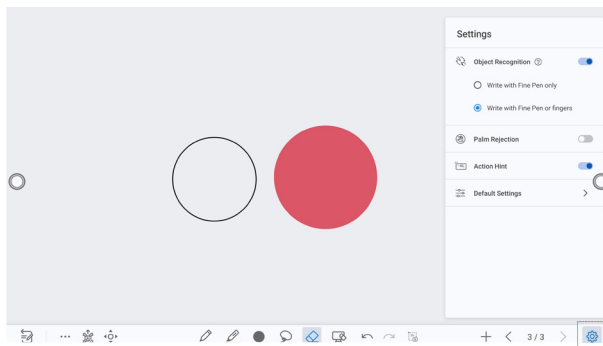
- **Capture**

Tap  to take a screenshot and save the data to file commander > picture > screenshot > image.



4.5.2 Whiteboard Setting


Tap the  icon to enter the settings bar, users can set the object recognition, action hint and default settings.



• Object recognition


Users can drag the slider to enable the object detection function, tap ? icon to view details functions, as shown in the following figure:

Example 1: Turn on write with Fine Pen only

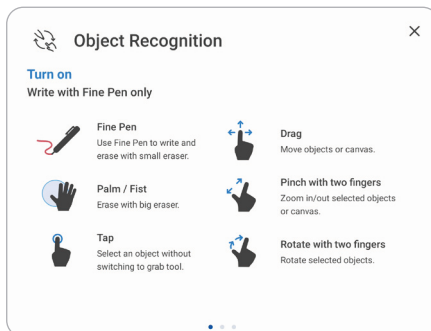


- Fine Pen (2mm): User Fine Pen to write and erase with small eraser.
- Fist/palm: identified as an eraser (100 pt).
- Tap: select an object without switching to grab tool.
- Drag: move objects or canvas.
- Pinch with two fingers: zoom in/out selected objects or canvas.
- Rotate with two fingers: rotate selected objects.

Example 2: Turn on write with Fine Pen or fingers

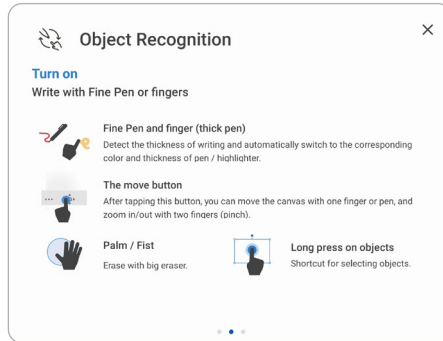

- Fine Pen and finger (thick pen): User Fine Pen or finger (thick pen) to write. System will detect the thickness of writing and automatically switch to the corresponding color and thickness of pen/highlighter.
- The move button: After tapping this button, you can move the canvas with one finger or pen, and zoom in/out with two fingers (pinch).
- Palm/Fist: Erase with big eraser.
- Long press on objects: Shortcut for selecting objects.

Example 3: Turn off object recognition

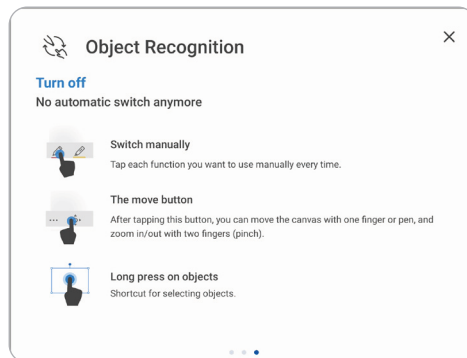


- Switch manually: Tap each function you want to use manually every time.
- The move button: After tapping this button, you can move the canvas with one finger or pen, and zoom in/out with two fingers (pinch).
- Long press on objects: shortcut for selecting objects.

Palm Rejection: Drag the slider to enable and disable the Palm Rejection. When Palm rejection is turned on, fingers and pen can write and draw, but palm and fist would not be recognized.

Action hint: Drag the slider to enable the action hint.

Default settings: Tap the button to enter the default setting page, any new page will use the default settings. Users can set whiteboard page background, change the color and thickness of Smooth Pen and Highlighter, change the default type of eraser, both object eraser and partial eraser can be set.

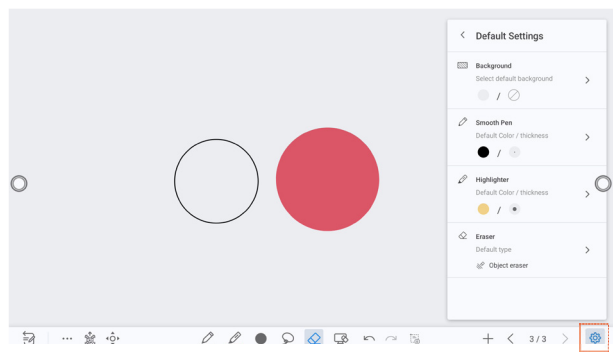


4.5.3 Page Operations

You can preview, select, and delete the writing page, you also can save the page to the USB Flash device or local files.

- **Page Preview**

Tap **1 / 1** at the lower right corner in the whiteboard mode. All pages will be displayed. Tap one page to switch to that page for more operations, as shown in the following figure.

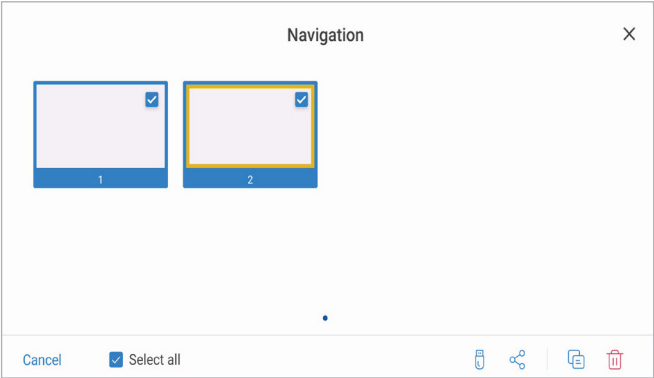






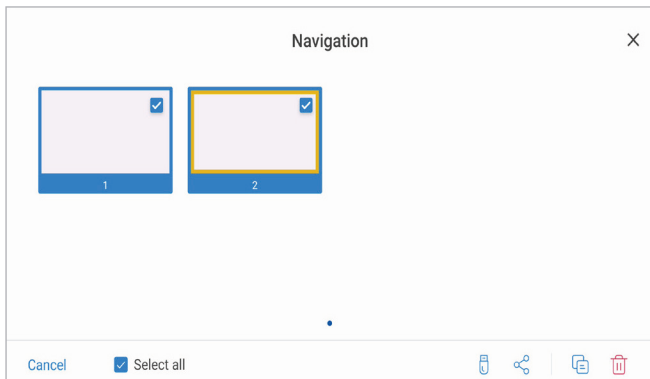
Note

Only 8 pages are displayed at once. You can slide right or left using one finger to see more.

• Page Operation

On the **Navigation** page, you can select or delete writing pages according to requirements, as shown in the following figure:



- Tap  to select all pages.
- Tap  to save the writing pages to USB flash device.
- Tap  to share the writing pages to local file or AquaMail.
- Tap  to copy the page.
- Tap  to delete selected pages.




4.6 Annotation

In annotation mode, the system generates a transparent layer at the top of the screen, and users can add annotations to the transparent layer until the annotation mode is exited.


The user can enter the annotation mode through the following two methods:

- Tap the “” icon in the sidebar;
- In the “Whiteboard” interface, tap the “” icon.

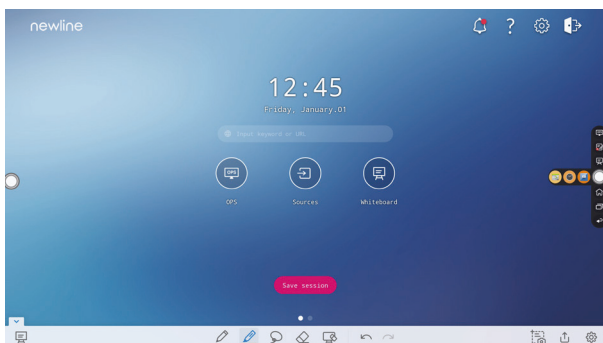



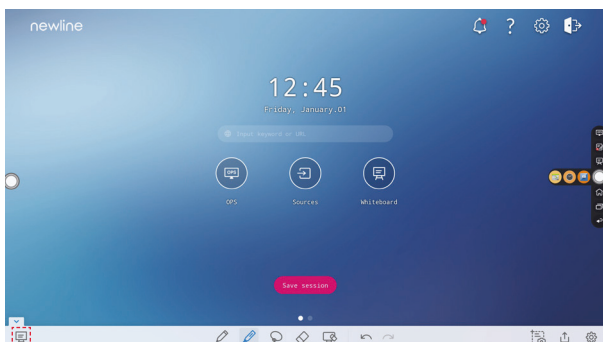


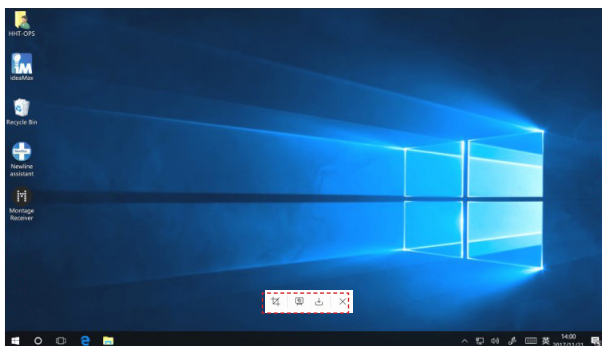
• Mode Switch

Tap  icon in the lower left corner to switch to whiteboard mode.







• Take a Screenshot


Tap  icon to enter take a screenshot interface, users can tap  icon to take a screenshot; tap  icon to switch to whiteboard mode; tap  icon to save screenshot, tap  icon to exit screenshot.



● Save screenshot

Tap  icon to pop up save screenshot interface, you can save or share screenshot as following:


- Tap  to view tutorial.
- Tap  to select all pages.
- Tap  to save the annotation pages to USB flash device.
- Tap  to share the annotation pages to local file or AquaMail.

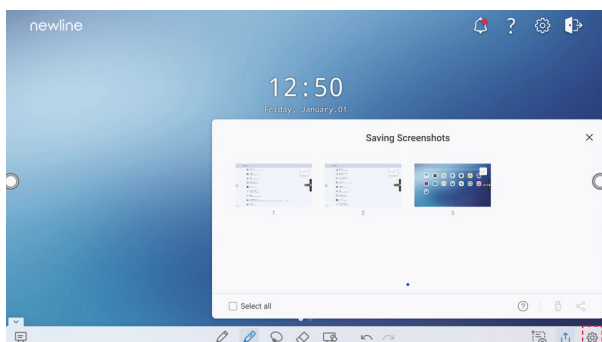


Note

You can select "**Internal storage > Pictures > Screenshots > image**" folder to view or get screenshots.

● Settings

Tap  icon to pop up settings interface, you can turn on/off object recognition, Action hint and Auto screenshot. If auto screenshot setting is on, system will automatic take a screenshot when exiting the annotation mode.

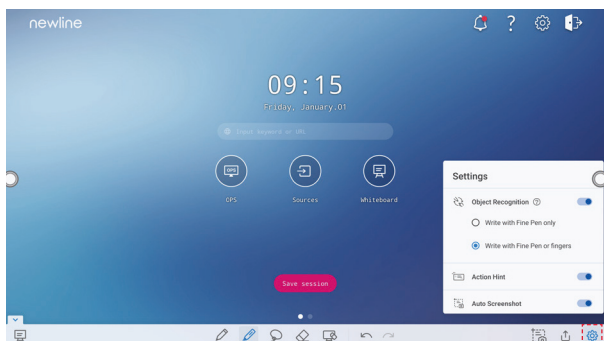


Note

If you need more details instruction, please refer to whiteboard setting.

4.7 Tutorial

On the homepage, tap ? icon on the upper right corner to enter the tutorial interface, users can swipe left and right with fingers to switch the tutorial page. There are 10 pages in the tutorial page, which respectively show the quick use of the product.

On the tutorial page, tap ? icon on the upper right corner to exit tutorial.

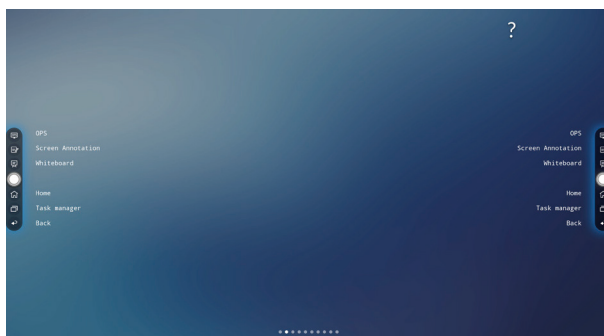

4.8 Tool bar

In the toolbar, press the black area above and pulled out, the sidebar can be transformed into a floating bar.

In the tool bar, users can tap the icon to enter function interface, add and delete icons, add custom icons, drag the tool bar with their fingers to move around on the screen.

Standard > Minimized




Standard > Favorite




Delete icons


Long press the icons to enter the icon deleting status, tap the × icon on the upper left corner to delete icons.

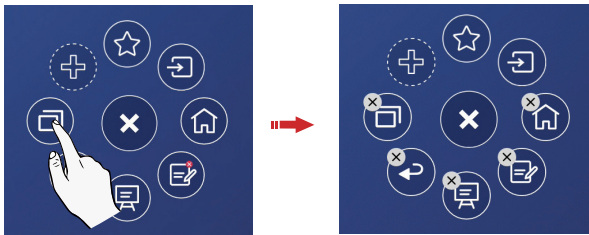


Signal source

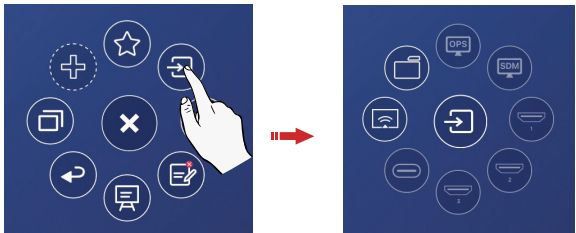




Customize the toolbar icons

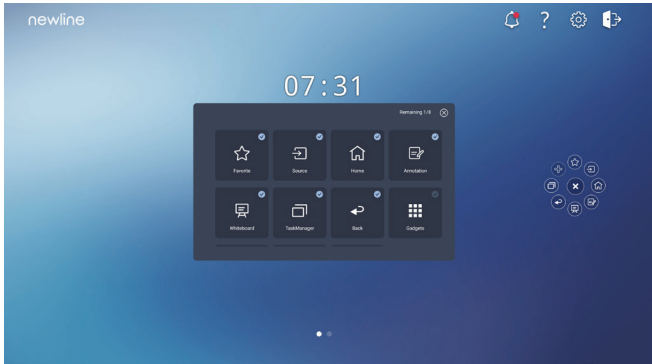In the tool bar interface, tap the  icon to show the following interface, users can customize the toolbar icons. Icons with ✓ on the upper right corner will display in the tool bar.



Customize the favorite icons

In the tool bar interface, tap the  icon to show , tap + icon to show the following interface. Users can customize the icons. Icons with ✓ on the upper right corner will display in the favorite icons bar.

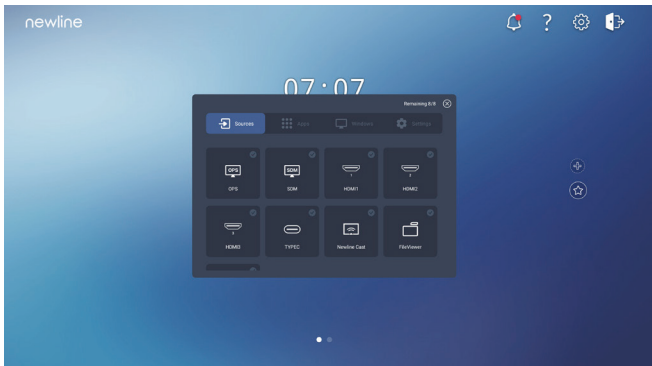





4.9 Gadget


Gadget displays all pre-installed applications. Tap the icon of an application to run the application. On the homepage interface, swipe left to enter the gadget interface.




Name	Icons	Functions
AquaMail		Tap this icon to enter the email application and send files. Before sending files, you need to add an email account.
Calculator		Tap this icon to enter the calculator application.
Calendar		Tap this icon to enter the calendar application.
Chromium		Tap this icon to enter chromium application.
Clock		Tap this icon to enter clock setting interface.
File commader		Tap this icon to open the File Manager and you can explore all internal and external files on the panel.
Newline App Store		Tap this icon to enter the Newline App Store application.
Newline Broadcast		Tap this icon to enter the Newline Broadcast application.
Newline Cast		Tap this icon to enter the Newline Cast application.
Newline Classroom		Tap this icon to enter the Newline Classroom application.
Newline Display Management		Tap this icon to enter the Newline Display Management application.

Name	Icons	Functions
Officesuite		Tap this icon to enter the Office suite application. In this application, you can view office files, including excel, word, power point, and PDF files.
Settings		Tap this icon to enter settings interface.
Visualizer		Tap this icon to enter the visualizer application.
Whiteboard		Tap this icon to enter whiteboard application.


4.9.1 Newline Cast

Multiple devices can be cast wirelessly to the display through several casting modes (Airplay, Google Cast...). To cast: Tap  on the gadget Page to enter Newline Cast. On screen directions will appear for you to follow in order to wirelessly cast to the display, as shown in the following figure:

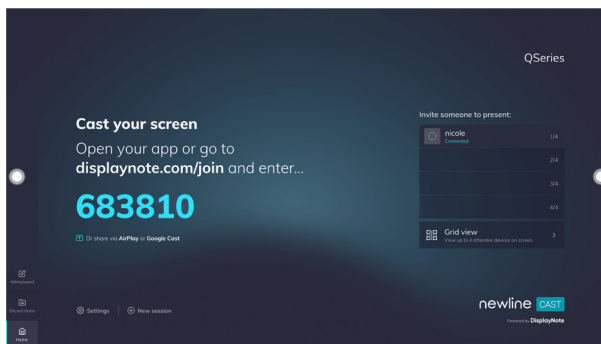


4.9.2 Newline broadcast

Newline broadcast can help you share your screen in real-time from your Newline display to any participant connected. Easily invite up to 200 participants to connect their own device from the meeting room, classroom, lecture theater or any other place in the world with a network connection.

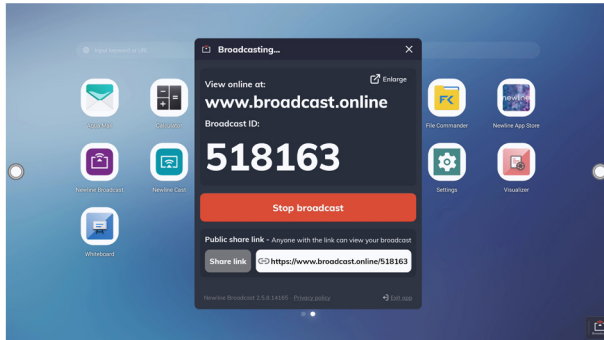

4.9.3 Newline App Store

Enter the Newline App Store, you can install apps as you need, enter my apps to uninstall the applications:

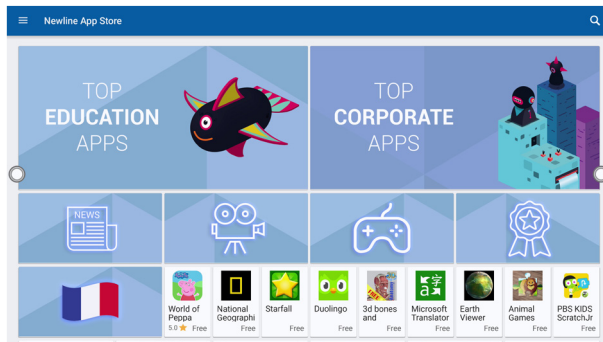


Note

Before installing an application, ensure that the installation lock is closed.

4.9.4 Newline display management+

Newline Display Management Plus is a remote display management solution that enables users to centrally manage the Newline displays from the comfort of their desk. Users can deploy and install apps, configure display settings, and push updates without communicating back and forth.

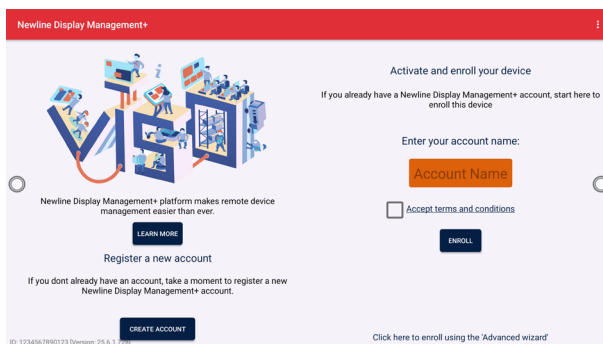

Note


Please visit our website at www.newline-interactive.com and enter **Product > software solutions** to get more details about newline cast, newline broadcast and newline display management.

4.9.5 File Management

The product supports connection to USB flash memory. In File Viewer application, you can preview all files in the internal storage and storage devices connected via USB ports and select, copy, paste, delete and search for files.


4.9.5.1 File Viewer Page

On the **Home** page, tap **File Viewer** to enter file commander interface, you can tap the icon to view pictures or files, as shown in the following figure:.

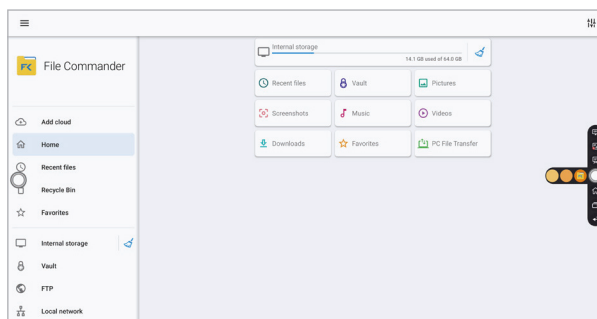


4.9.5.2 File Preview

Using the File Viewer application, you can tap the submenu on the left side to preview what files are on internal storage, external storage devices connected via the USB ports, cloud stored files, FTP uploaded files, and local network files, as shown in the following figure.

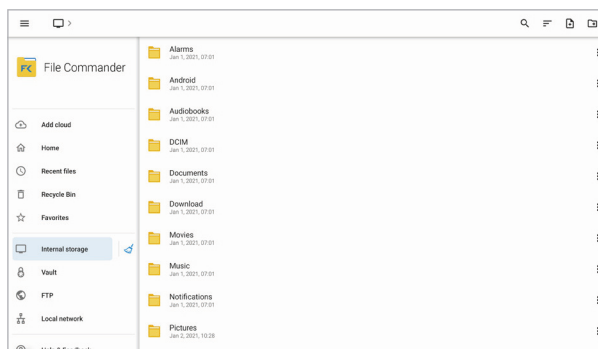



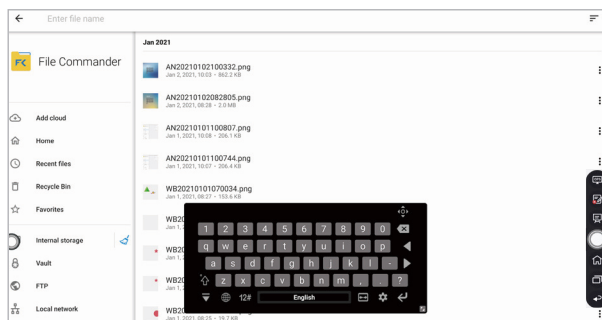


4.9.5.3 File Search


Enter the **File Viewer** application and tap . In the dialog box, enter the keywords in the search box. The system will display a list of files that match the searched for keywords.





4.9.5.4 File Filtering


You can tap the menu on the left side to display files by type, for example, whether the files is a document, a picture, music, a video, archived or was downloaded.

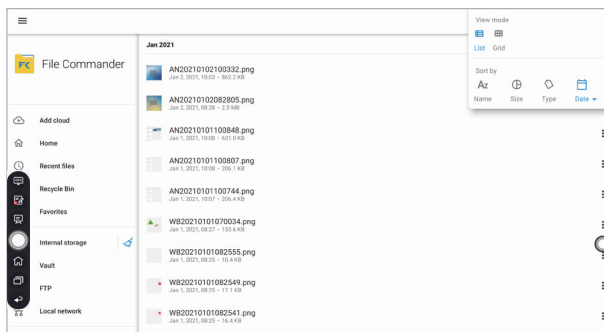- The system supports two view modes: list and grid. You can tap  or  on the top right corner to switch  or  view modes.
- Tap  to display files based on name, type, size, and modification.




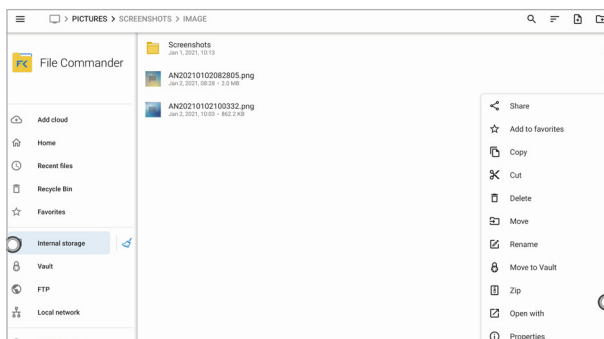
4.9.5.5 New Folder

Enter the **File Viewer** application, and tap  to create new file or tap  to create new folder, as shown in the following figure.

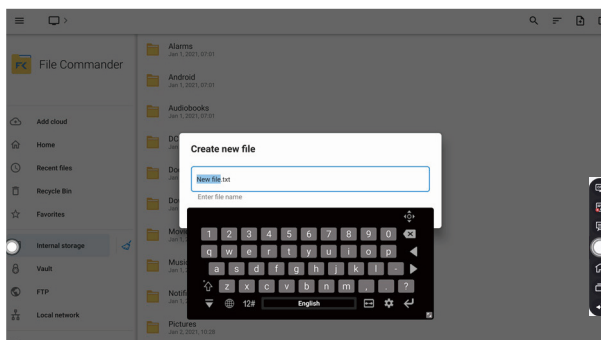

4.9.5.6 File Operation

Enter the File Viewer application. You can create folders according to requirements, select files by long pressing, and set wallpaper/copy/paste/delete. For details on other operation, tap  in the upper right corner for more operation.




4.9.5.7 File Name

Under the " **Internal storage > Pictures > Screenshots** " folder in the File Manager, remote control screenshots of this meeting are saved.



Screenshots include annotation page screenshots, screenshot pages in the discussion mode are saved in the "Internal storage > Pictures > Screenshots > image" folder. Depending on the screenshots mode, picture naming is different. Picture files are named in the following of prefix + creation file.

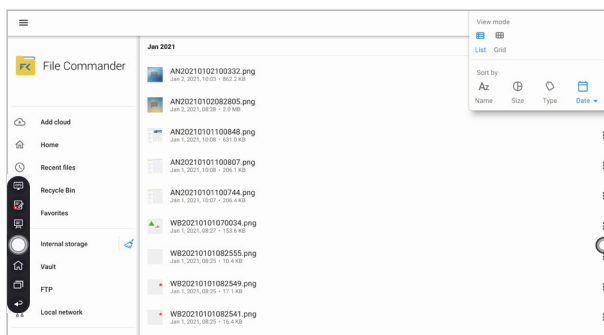
Prefix name rule: WB (discussion mode page), AN (annotation page screenshot).



4.10 System Settings

Enter the system setting page using one of the following methods:


- Tap  on the **Home** page.
- In the **Quick Setting Menu**, tap the  icon.

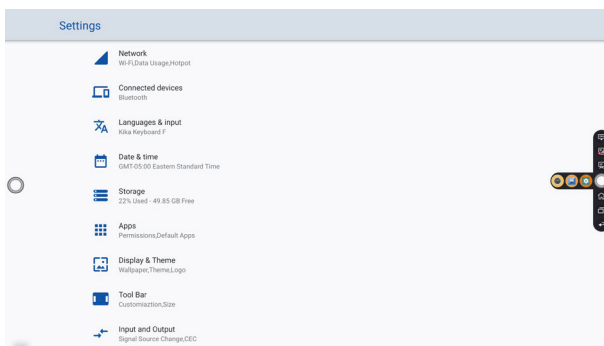

4.10.1 Network


Enter the **Network** submenu to enable Wi-Fi or Ethernet, view network information, and enable the Wake on LAN function.

- **Wi-Fi:** Tap the corresponding button to enable the Wi-Fi function.
- **Ethernet:** When the RJ45 port is properly connected to the network cable, tap the corresponding button to enable the Ethernet function. User can View the MAC address, IP address, gateway, subnet mask, and DNS information. The user can customize settings to automatically obtain an IP address of the LAN or set a static IP address as needed.
- **Hotspot & tethering:** The user can customize relevant settings for portable Wi-Fi hotspot.
- **Wake on LAN:** Tap the corresponding button to enable **Wake on LAN** function.
- **Proxy:** Tap the item to view proxy server.

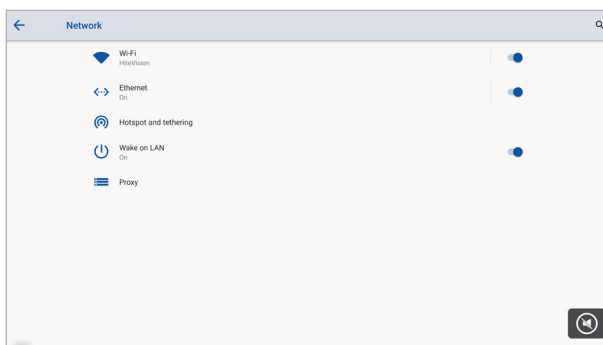


4.10.2 Connected devices

Enter the **Connected** devices submenu to turn on Bluetooth, system will automatically detect and connect to new device via Bluetooth.

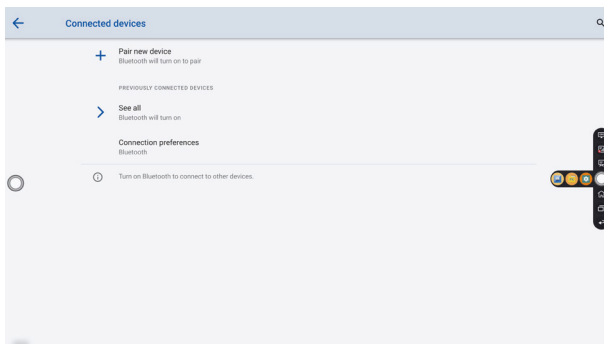


4.10.3 Language and Input

Enter the **Language & Input** submenu to set language and keyboard. The default input method of the system is **Kika Keyboard F**, and Physical keyboard must be enabled.

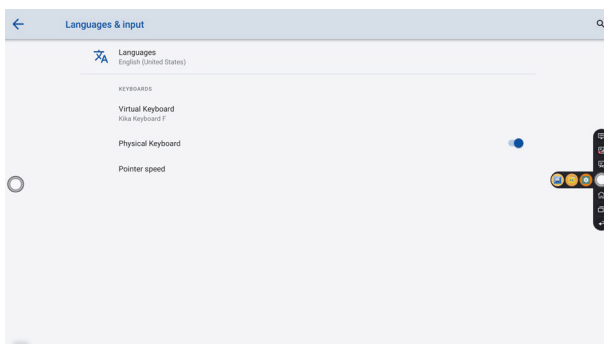


- **Setting kika keyboard F**

Tap **Virtual keyboard** at the left side, select kika keyboard F to set a language in the **keyboard** dialog box.

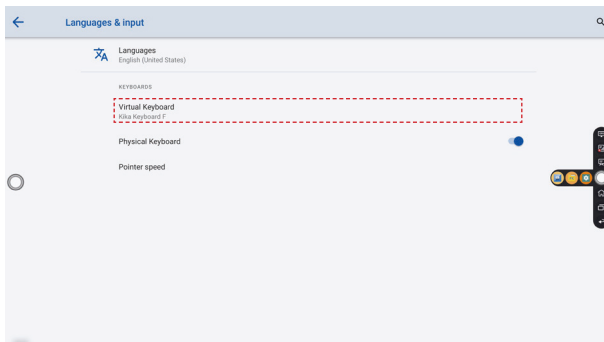

4.10.4 Date & Time


Enter the **Date & Time** submenu to set the date and time. Before setting the date and time, users should tap **Time zone** to select local time zone.

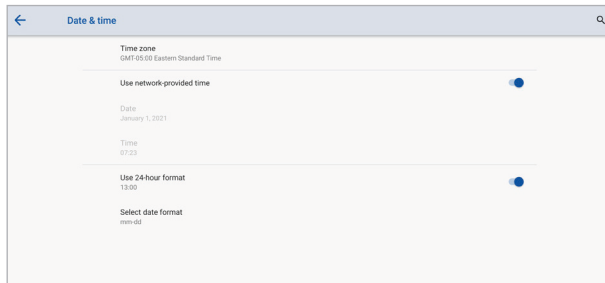


- **Setting a Date**

You can automatically obtain the system date or customize time.

- To automatically obtain time, select **Use network provided time**.

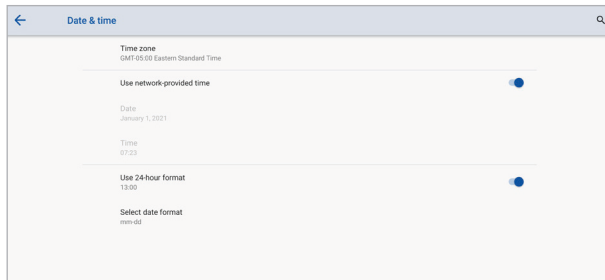


- To customize a date and date format, set them in **date** and **Select date format**.

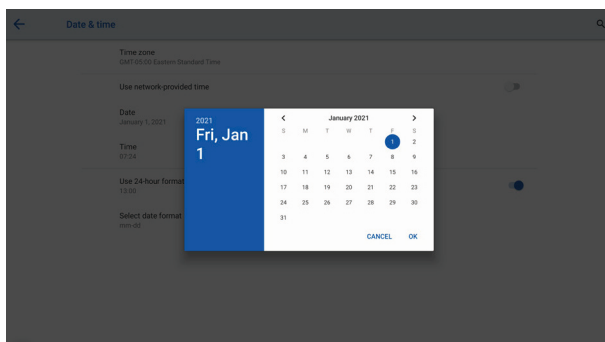


- **Setting Time**

You can automatically obtain the system date or customize a date.

- To automatically obtain a date, select **Use network provided time**.

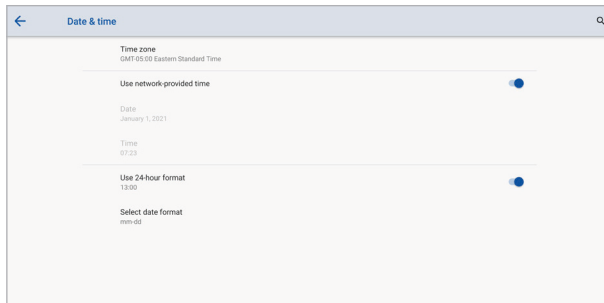

- To customize time and time format, set them in **time** and **Use 24-hour format**.

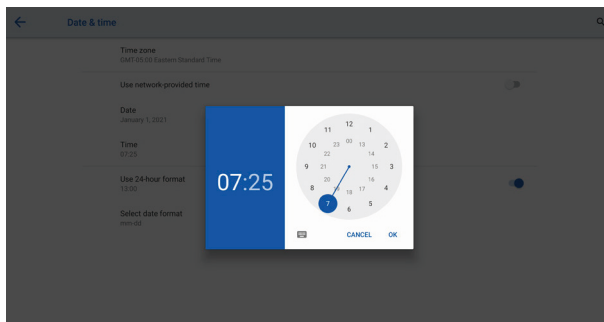


Note

Time format will be 24-hours mode only when the **Use 24-hour format** is selected, otherwise time format will be 12 hours mode.

4.10.5 Sounds


Enter the **Sounds** submenu to select the sound output channel, options included, sound-speaker, S/PDIF, ARC, Lineout, Mixed.

- **Speaker:** Select this option, sound will come out of the IFPD speaker.
- **S/PDIF:** Select this option, sound will come out of the device connected to S/PDIF port.
- **ARC:** Select this option, sound will come out of the device connected to HDMI out(ARC) port.
- **Lineout:** Select this option, sound will come out of the device connected to Line out port.
- **Mixes:** Select this option, sound will be output from all four of these options simultaneously.

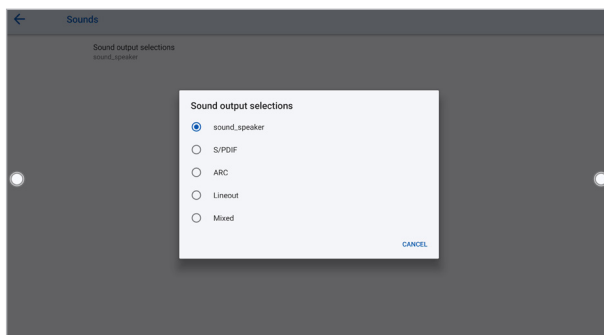

4.10.6 Storage

Enter the **Storage** submenu to view the storage and space distribution of Built-in storage, USB flash drive and SD card(Internal Expansion Storage).

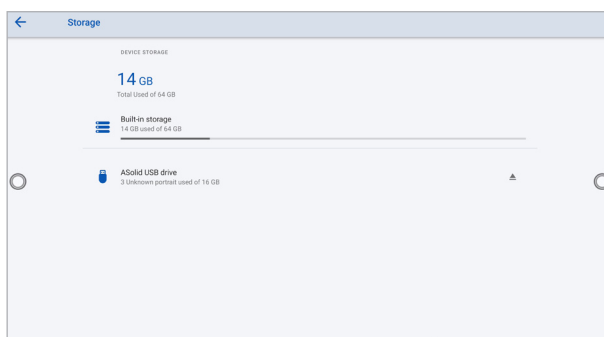


Note

SD card will be renamed as Internal Expansion Storage after formatting it as internal storage.

4.10.7 Apps

Enter the **Apps** submenu to view downloaded applications by type, running applications, and all applications.

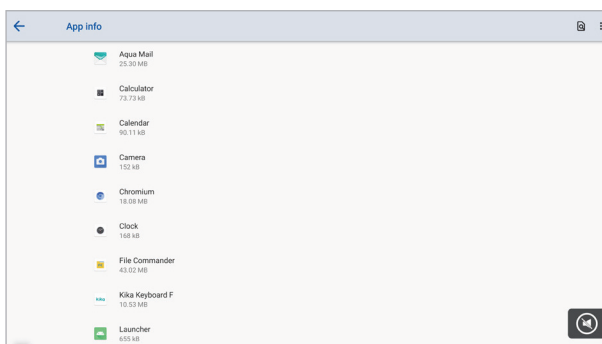

4.10.8 Display & Theme

Enter the **Display & Theme** submenu to set the theme, wallpaper, logo and font size.


- **Theme:** Standard, abstract, galaxy, forest, classic, five themes can be chosen;
- **Wallpaper:** Users can use default wallpaper, customize the wallpaper from file viewer;
- **Logo:** Tap the button to turn on/off the logo on the Home page;
- **Set logo:** Users can use default logo or customize the logo from file viewer;
- **Font size:** Tap to set the font size.



4.10.9 Tool Bar

Enter the **Tool Bar** submenu to set whether to display the tool bar.


- **Left:** Tap to turn on/off the left tool bar.
- **Right:** Tap to turn on/off the right tool bar.
- **Quick settings:** Tap to turn on/off the tool bar on the Quick settings.

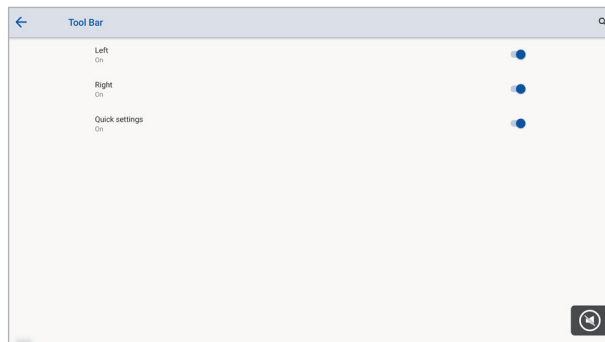


4.10.10 Input and Output Setting

Enter the **Input and Output** submenu to set the Home source and USB connection, enable new input source and CEC auto.

- **Starting source:** Customize settings to connect to the signal source after power on.
- **Source preview:** Tap to turn on/off the source preview.
- **Auto Source Switching:** After the **Auto Source Switching** function is enabled, the system can automatically switch to the screen of the newly connected signal source.
- **CEC Auto Power On:** “**CEC Auto Power On**” is enabled, When the HDMI port of the panel is connected to a CEC device (such as a DVD), and both the CEC device and the panel are turned off, if the CEC device is turned on, the panel automatically turns on after receiving command from the CEC.
- **CEC Auto Power Off:** “**CEC Auto Power Off**” is enabled, When the HDMI port of the panel is connected to a CEC device, and both the CEC device and the panel are turned on, if the panel is turned off, the CEC device automatically turns off after receiving the command; if the CEC device is turned off, the panel automatically turns off after receiving the command.
- **HDMI 1/2 & DP EDID switch 2.0:** Tap to choose the HDMI1.4 or HDMI 2.0.

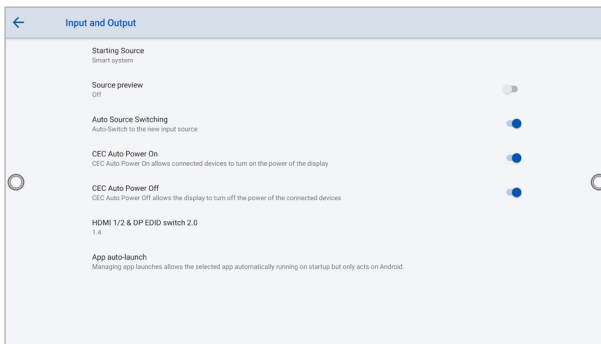


- **App auto-launch:** Tap to select the app or a URL automatically running on startup, the app auto-launch only acts on Android system.

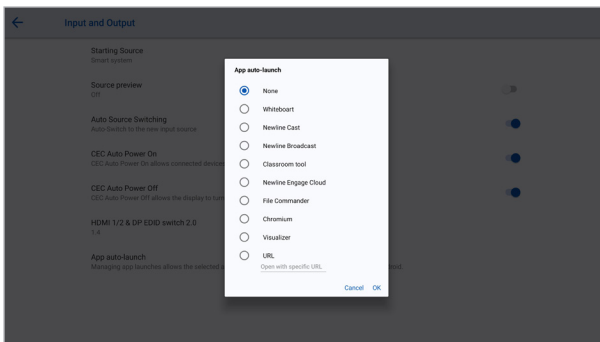


4.10.11 Power Setting

Enter the **Power** submenu to set power on or power off as following:


- **Auto power on/off:** Tap the button to enable the function, users can set the power on/ off on time.
- **Power on/off on time:** Set the power on/ off time, system will automatic power on/off on the customize time.
- **Energy saving:** Set a duration after which the panel enters the lock mode if the panel is left un-operated.
- **Power Button Options:** Set the system enter power off or sleep mode when users press power button.
- **Tap to wake screen:** Tap the button to enable the function, users can touch the screen to wake up the system from sleep mode.
- **Motion Sensor/Proximity Sensor:** Tap to turn on/off the proximity sensor function.
- **Signal Source Wake-up:** Tap to turn on/off Signal Source Wake-up.

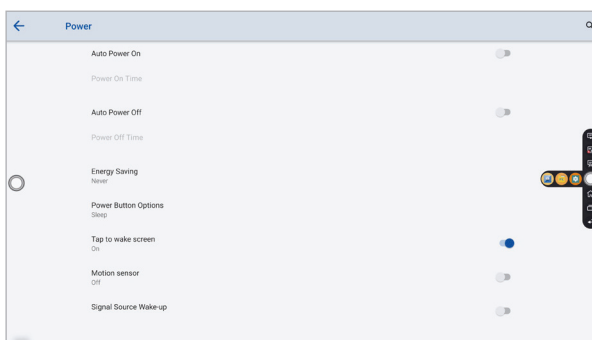

- To set the automatic power on time, select **Auto power on**, and set the power on time in **Power on time**, as shown in the following figure.

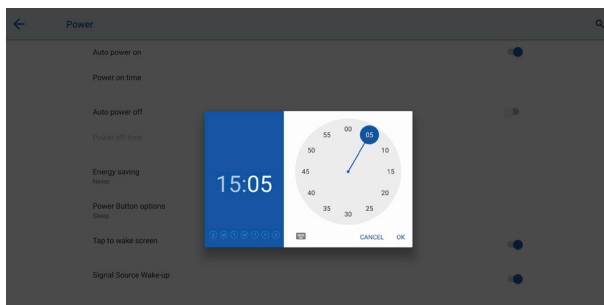


- To set the automatic power off time, select **Auto power off**, and set the power off time in **Power off time**, as shown in the following figure.

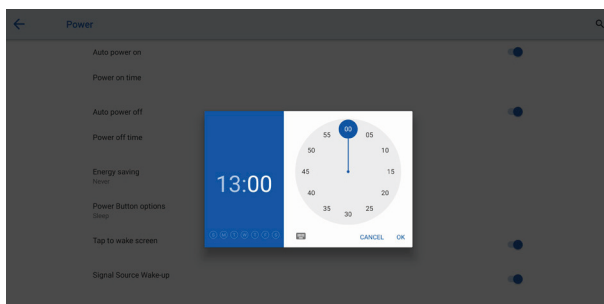

- To set the energy saving time, tap **Energy saving**. In the dialog box that is displayed, set a duration after which the screen enters the lock mode if the screen is left un-operated. After the screen is locked, if the user does not operate the screen within 120s, the screen enters the power off mode. The duration can be set to **30 MIN**, **60 MIN**, **90 MIN**, or **NEVER**. You can also customize this duration and the range is 3 minutes to 480 minutes.

Note


NEVER indicates that the automatic power off mode function is not enabled.

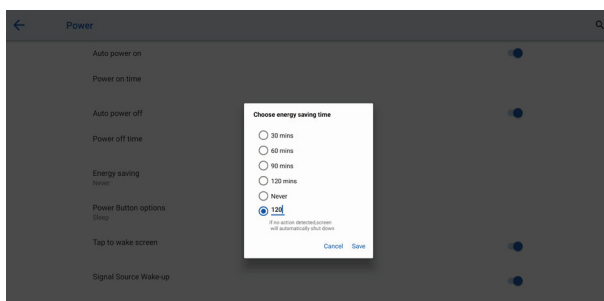

4.10.12 Screen Eye Filters


Enter the **Screen Eye Filters** submenu to set **Writing Mode Filter**, **Brightness Mode Filter** and **Bluelight filter**. If only the **Bluelight filter** setting is on, the **Filter level** can be set.

When **Writing Mode Filter** is on, the display will change whiteboard brightness under writing mode. When **Brightness Mode Filter** is on, the display will change screen brightness based on ambient light. When **Bluelight filter** is on, the filter level tints your screen abmer, this makes it easier to look at your screen or read in light.

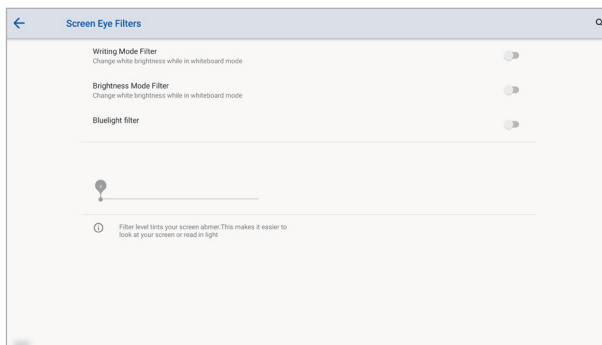


4.10.13 System

Enter the **System** submenu to see system version information and admin mode.

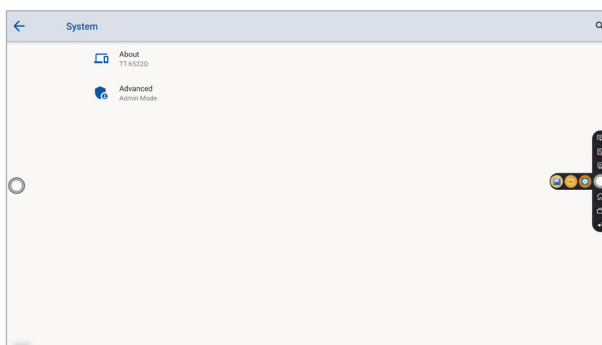


• About

Enter About to check the system info such as Model, serial number, system version, firmware version, IP address, MAC address...etc.

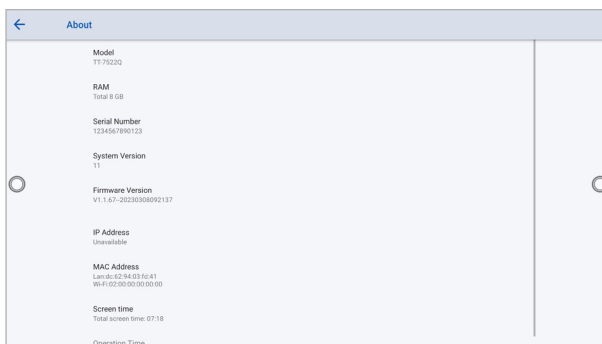

• Screen time


Tap to set the type of screen time, options included total screen time, daily screen time and weekly screen time.

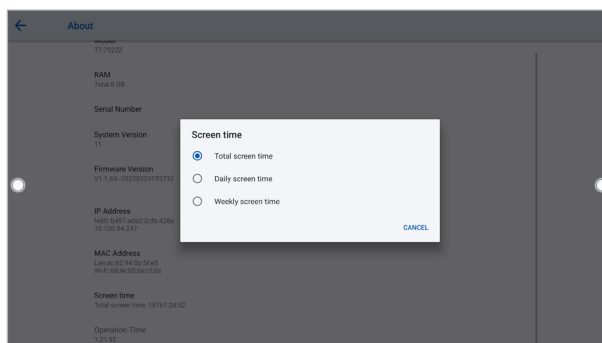


• Advanced

For enhance the security, and the better user experience, we collect the settings about the security to the admin mode.

- Go to Settings → System → advanced, tap the admin mode, and then use the floating keyboard on the screen, enter the passkey 2364606633 to get into the admin mode.

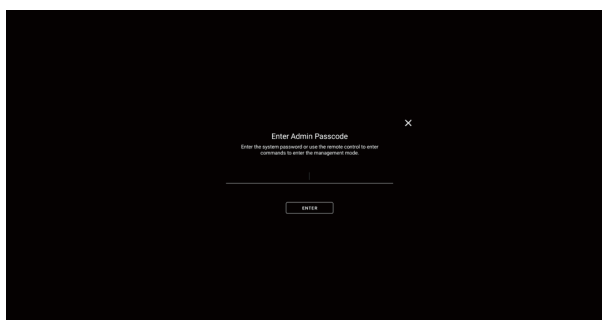

- Then you will see the admin mode pops up. You can press the X button at the top of the right corner to exit it.

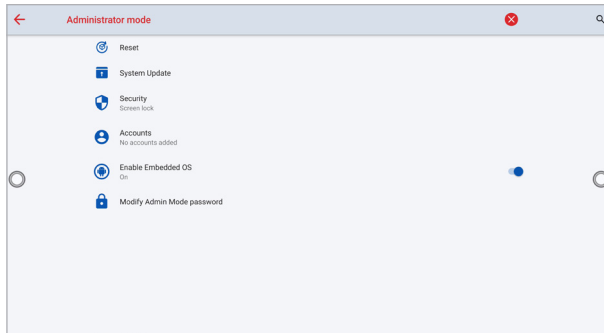


Notes

You can modify admin mode password in this interface, admin mode password consists of a maximum of 16 digits.


1. Reset

Enter the **Reset** submenu to set about the network settings reset, reset app preference and factory data reset.

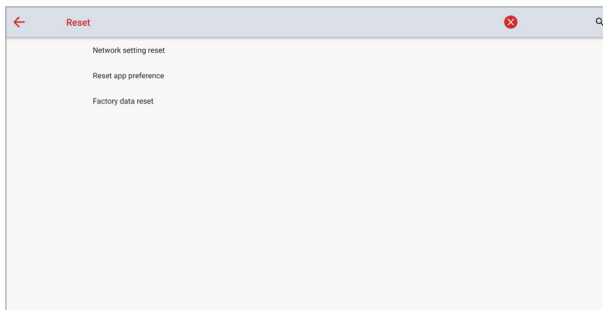


2. System update

Enter the **System update** submenu to update the system.

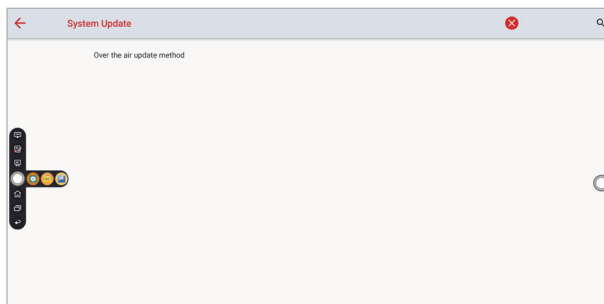


3. Security


Enter the Security submenu to set about the all the security related settings such as USB lock, setting lock, gadgets lock...etc

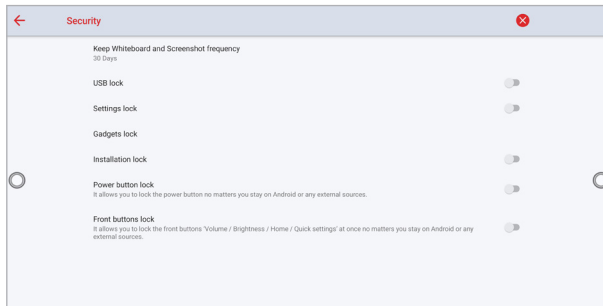

- Keep Whiteboard and Screenshot frequency: you can set the time period of keep the data, the default setting is after each session.

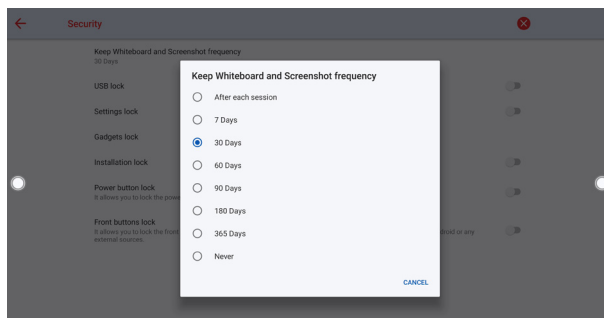

- USB lock: When you enable the USB lock, under the smart system, only USB disk will be locked, user will not able to read the data from the USB disk, but USB mouse and keyboard could be used. Under the external source, all the USB devices will be blocked.
- Settings lock: When you enable the setting lock, the setting-related icons will be displayed as locked, if you would like to do the setting, need to enter the admin mode and turn it off.
- Gadgets lock: All the installed application will be listed here, you can disable any gadgets you don't want to show in the gadgets list except whiteboard and settings.

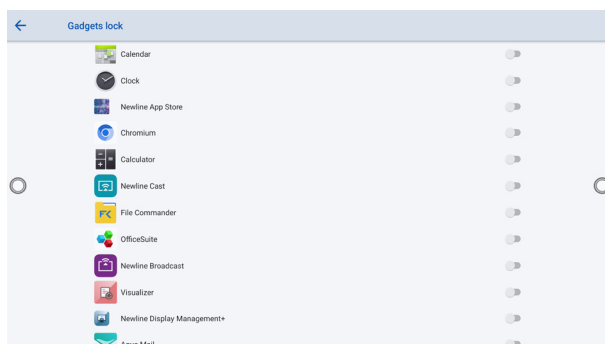


- Installation lock: When you enable the Installation lock, under the smart system, you will not be able to install software through the app store or USB flash drive.
- Power button lock: When you enable the power button lock, the power button will be locked no matters on Android or any external sources.
- Front buttons lock: When you enable the front button lock, the front button will be locked no matters on Android or any external sources.

4. Accounts

There are multiple user roles under the Account menu, and the permissions for each role can be assigned as shown in the table below. Tap Accounts to enter the following interface.

Functions	Admin	Owner	User	Guest
Capacity	1	1	5	1
Password composition	≤16 digits	6 digits	6 digits	None
Login to the system	Only entering the advanced	Password or NFC card	Single user mode: none; Multi-user mode: password or NFC card	None
Enter admin mode	2364606633	2364606633	No permission	No permission
Permission	High-level management	General management and usage	General usage(most functions available)	Basic functions available

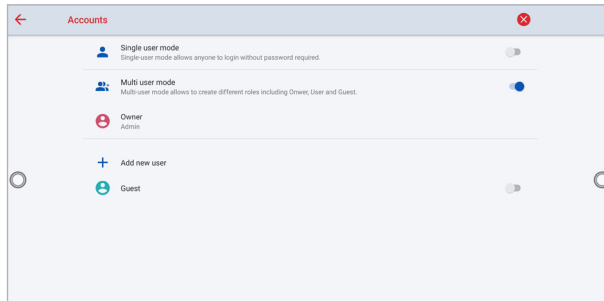

For a better user experience and private security, we have developed both single-user and multi-user mode.

(1) Single User mode

Single user mode allows anyone to login without password, tap to enter single user mode. The panel will restart and enter Home page.


(2) Multi User mode

Tap to enter Multi-user mode, the system will restart and enter the login interface. All registered accounts will appear in the login interface, you can tap any one of the account to login. If you want to switch accounts, just go back to the login screen and reselect it.

(3) Owner

Tap the Owner to enter the following interface, you can change the account information as follow:


- Owner rename: If you would like to change the owner name, you can rename it here.
- Owner reset passkey: If you would like to reset passkey, you can reset it here. The passkey is only limited to 6 digits, English letters are not allowed.
- Owner NFC ID: If you would like to add a NFC ID, you can add it here. More details please refer to (5)Add NFC Card(Optional).
- Owner import data: If you had more than two devices and would like to keep the setting as the same. You can put the export file into the USB disk and plug it into the
- Owner export data: If you had more than two devices and would like to keep the setting as the same. You can export the settings in the setting page. All the configuration setting will be exported as a file called 811config.json.

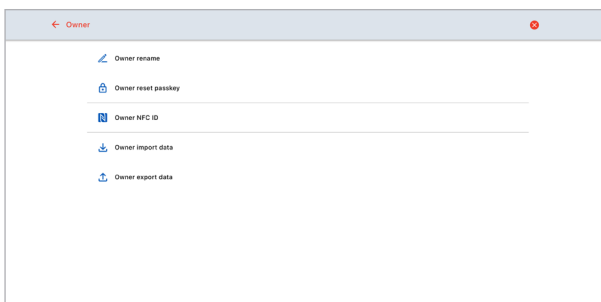

(1) Add New User


You can share this device with other people by creating additional users. Each user has their own space with customizable options such as apps, wallpapers and so on. You can add a maximum of five new users.

Tap the **Add New User** to enter the following interface, you can tap **OK** to add new user as guidance.

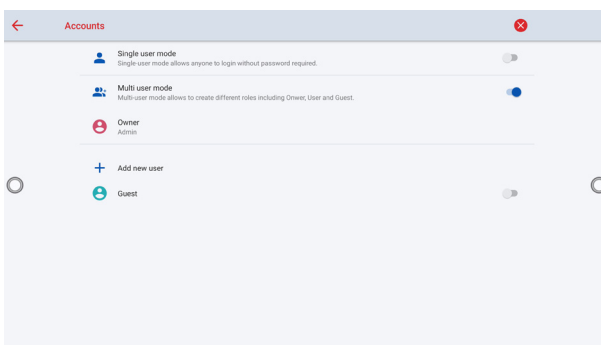

After a new user is added, you can modify the user information as follow.


- User rename: If you would like to change user name, you can rename it here.
- User passkey: If you would like to reset passkey, you can reset it here. The passkey is only limited to 6 digits, English letters are not allowed.
- User NFC ID: If you would like to add a NFC ID, you can add it here. For more details please refer to (5)**Add NFC Card(Optional)**.
- User import data: If you would like to keep the setting as the same. You can put the export file into USB disk and plug it into USB port, then press the import option to import the setting you have done in the other device. You can also import or export the settings of the same device. The settings of different users can be exported to each other.
- User export data: If you would like to keep the setting as the same. You can export the settings on the setting page, partial configuration setting will be exported as a file called 811config.json.
- User delete: Tap to delete the user account.

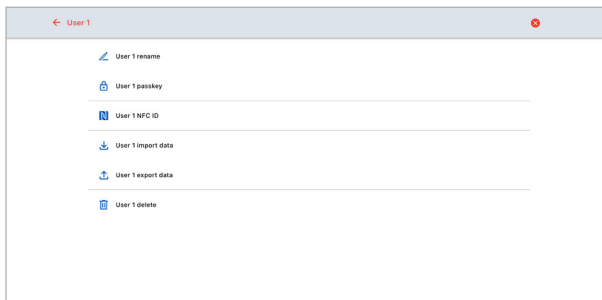


(2) Add NFC Card(Optional)

Configure the NFC card to allow users to quickly access the home page without entering a password. One owner NFC card and five user NFC cards can be added to a panel. The panel supports all NFC function cards.


Tap User 1 NFC ID to enter the following interface, put the card close to the sensing area and keep it until success.

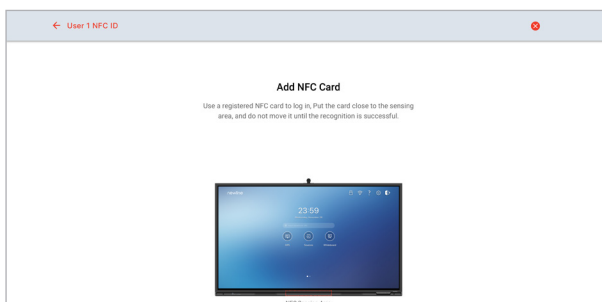

An ID number will be displayed on the interface after the NFC card is added successfully. One NFC ID card can be bound to one user on one panel, but can be used on several different panels.

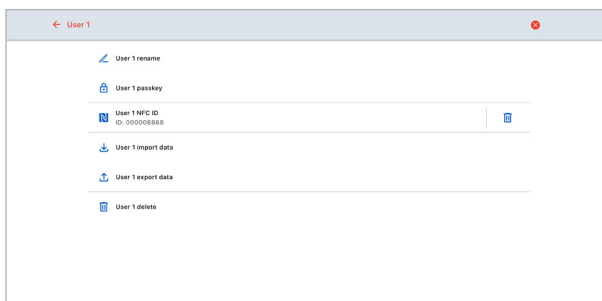

After adding NFC ID, the user can swipe NFC directly on the login interface to enter the home page.

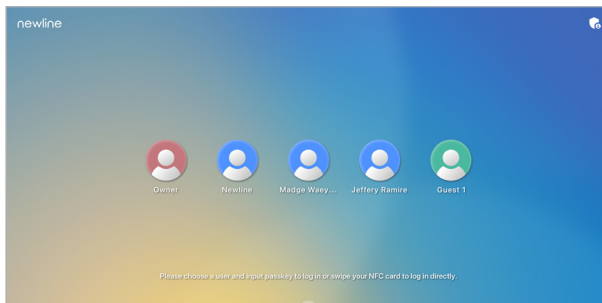

(3) Guest

Tap the button to turn on/off the guest function. After the guest function is enabled, a guest icon is displayed on the log-on page, tap the icon to access the home page. No password is required to access the system as a guest.


5. Enable Embedded OS

Tap the button to turn on or off Enable Embedded OS, it requires restarting the panel to apply all changes. Press **DOWN> DOWN> UP> UP> LEFT> RIGHT** on the remote control to turn on enable Embedded OS.






6. Modify Admin Mode password

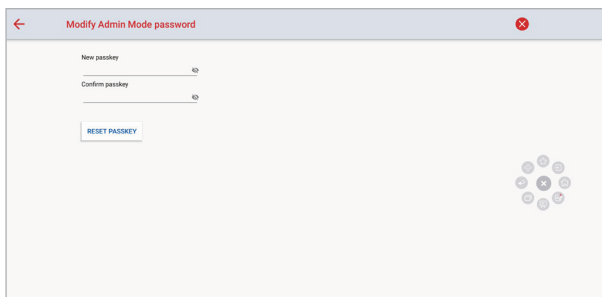
Tap to enter the Modify Admin Mode password interface, you can reset admin mode passkey as you need. Admin mode password consists of a maximum of 16 digits.



4.11 Save Session

 Save session button will appear at the bottom of the screen when there is whiteboard data, new screenshot data. Click **Save session** button to enter the Save session pop-up window. Users can save the session file as their needs.

- Tap  to select all pages.
- Tap  to save the annotation pages to USB flash device.
- Tap  to share the session pages to local file, Aqua Mail or Android Bluetooth.
- Tap [BACK](#) to back to the Home page.
- Tap [END](#) to end the session.

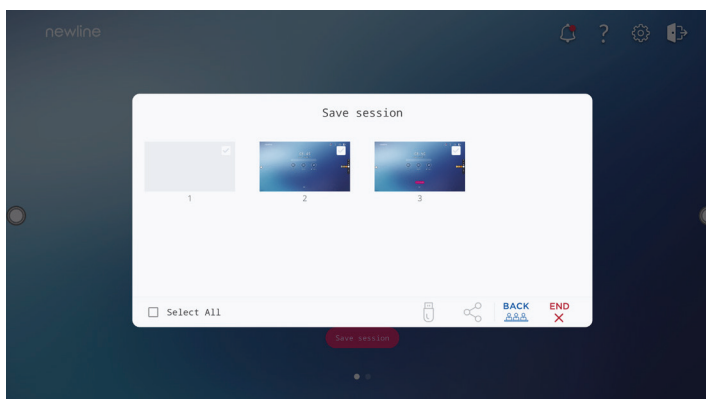

Notes

- Save session function will only save the data generated in this session, the previous session data will not appear.
- Do not eject USB flash memory before completing the saving process.
- If the USB flash memory is bigger than 16GB or the file format is not FAT32, the data will not be saved properly.

4.12 Automatically Power Off

If the screen is left un-operated for a specified duration, it will be locked to guarantee your privacy. Choose Settings> Power Setting to set the duration. For details on the setting method, please refer to "Power Setting".


After the screen is locked, if it is operated again within 120 seconds, the screen is unlocked. Otherwise, system enters the power off mode.

5


Add Shortcut

5.1 Add Shortcuts to Dock


Step 1: Long press any one of icons in the dock bar to enter the editing state, the main icon and icon name can be modified. As shown in the following figure:

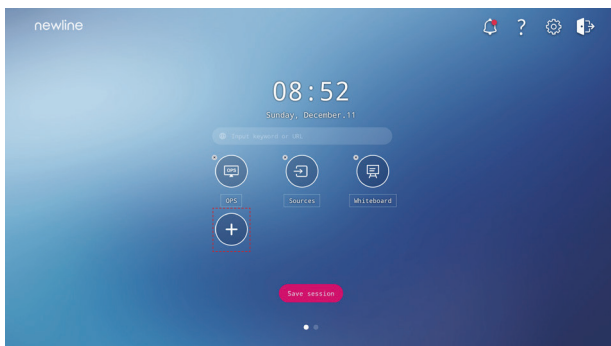

Step 2: Tap the "+" icon to enter the add **Main Icon** interface, users can add up to 6 icons, as shown in the following figure:

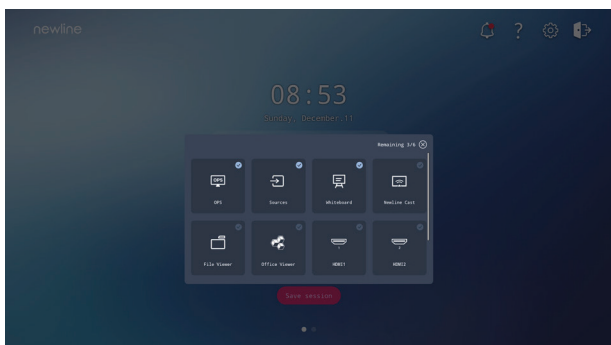

Step 3: On the Home page, tap the shortcut icon and you can start the program/ application or change to the external signal source.

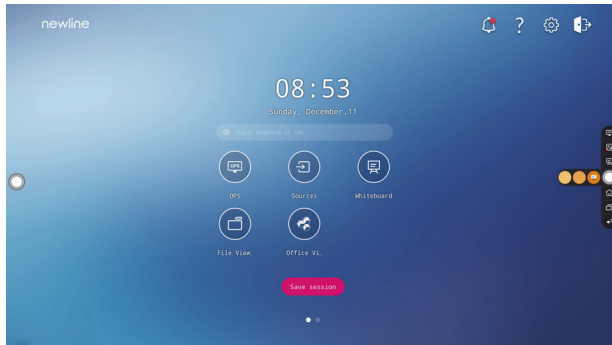


Note

After all 6 main icons are added, long press will not appear the + icon.

5.2 Delete Shortcuts

Long press any one of icons in the dock bar to enter the editing state. Tap the × icon in the upper left corner to delete the Main Icon.

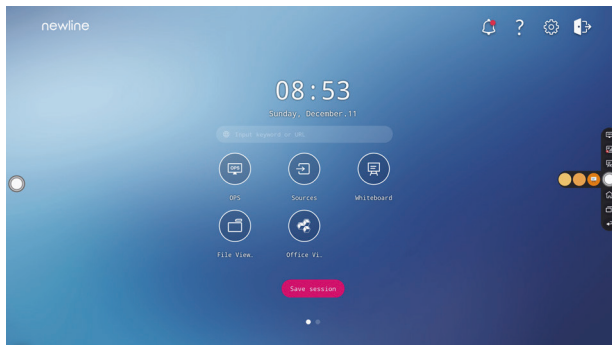


Note

Users can tap the icon name to modify as your need.

5.3 Launcher edit name

Long press the name of the icon to enter the modify remarks interface, you can customize the name as you wish.

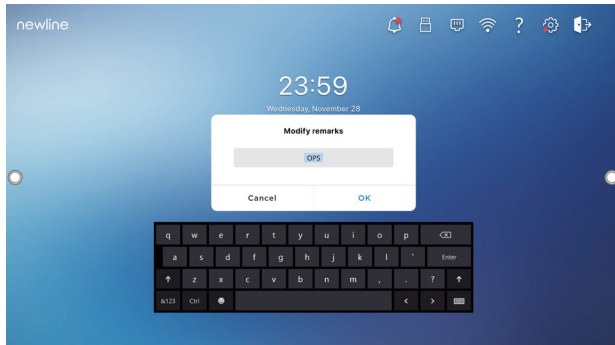

5.4 Newline Assistant

5.4.1 Introduction

The Newline Assistant agent is a tool used as a bridge between the embedded operating system and the OPS. It helps add Windows software shortcut to the Home Page, as well as to protect USB data when switching between sources.

Therefore we recommend users install the Newline Assistant after installing the OPS.

5.4.2 Installation

Step 1: Install the OPS source (See "Installing the OPS (Optional)").

Step 2: On the **Home Page**, tap **OPS** and the source will switch to the Windows operating system.

Step 3: Visit our website at www.newline-interactive.com and choose **Support > download > Q+ series** to download the Newline Assistant installation package.

Step 4: Install the **Newline Assistant** as instructed.


5.3.3 Add Quick Start Windows Programs in Smart System

Step 1: In Windows, run the **Newline Assistant** program, drag the software icons or folder shortcut icons that you want to add from the desktop or menu to the **Newline Assistant** window. The applications added or deleted through the Windows system will be automatically updated when the upload progress reaches 100%. If an application is not updated, tap **Sync** icon in the upper right corner to manually update the Newline assistant window on the embedded operating system.




Tip:

Only folders and .exe file are supported.

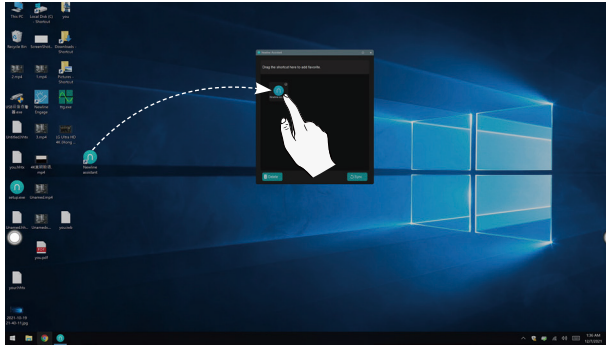

Step 2: Enter gadget interface to view all the Windows software shortcuts added by the Newline Assistant in Step 1.

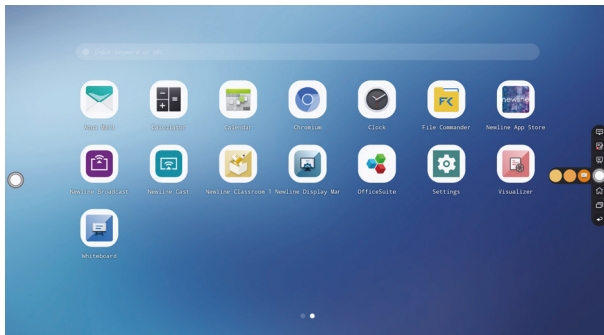

Step 3: On the gadget interface, tap the icon of an added Windows application to start the software.




6

Quick Setting Menu


Using two fingers and swipe up from the bottom of the screen to access the Quick Settings menu, as shown in the following figure.




Icon	Functions
	Drag the slider to adjust the brightness.
	Drag the slider to adjust the volume.
	Tap the icon to enable the Freeze Function.
	Tap the icon to mute/unmute.
	Tap the icon to enable or disable the embedded operating system Wi-Fi.
	Tap the icon to launch the Newline Classroom Tools.
	Tap the icon to enable sound only mode. In sound only mode, the screen LCD displays and LED backlight turns off, other functions will continue to work as normal.
	Tap the icon to enable or disable the left toolbar.
	Tap the icon to return to Home page.
	Tap the icon to view the external signal sources.
	Tap the icon to enter the settings page.

Icon	Functions
	Tap the icon and choose an app to use in split screen.
	Tap the icon to lock/unlock the screen.
	Tap the icon to log out of your profile.

Sound Setting

Tap  to enter sound settings, you can set the sound as follow.

- Volume: Drag the slider to adjust the volume.
- Mute: Tap the icon to enable or disable the mute mode.
- Sound Only: Tap the icon to enable or disable the Sound Only mode.
- Sound mode: Tap the button to set the sound mode (Standard > Meeting > Classroom).

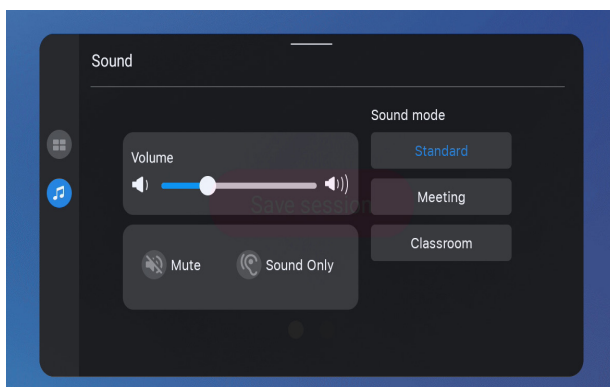


7

Serial Port Control

RS232 communication cable (please use cross data cables)

PIN	This Device	Computer
1	NC	NC
2	RXD0	TXD0
3	TXD0	RXD0
4	NC	NC
5	GND	GND
6	NC	NC
7	NC	NC
8	NC	NC
9	NC	NC
Cover	GND	GND

 

RS232 port of panel

Connect RS-232 port to the PC or controlling product. Enable RS-232 serial port connection and complete the following configuration.

Port: COM1 (Set according to PC or controlling product's port number)			
Baud rate	115200	Odd/even check	None
Data bits	8	Stop bit	1

- The following tables list controlling codes, querying codes and return codes.

Function	Controlling codes	Return codes
Power on	7F 08 99 A2 B3 C4 02 FF 01 00 CF	7F 09 99 A2 B3 C4 02 FF 01 00 01 CF
Power off	7F 08 99 A2 B3 C4 02 FF 01 01 CF	7F 09 99 A2 B3 C4 02 FF 01 01 01 CF
Mute/Unmute	7F 08 99 A2 B3 C4 02 FF 01 02 CF	7F 09 99 A2 B3 C4 02 FF 01 02 01 CF
Signal source	7F 08 99 A2 B3 C4 02 FF 01 06 CF	7F 09 99 A2 B3 C4 02 FF 01 06 01 CF

Function	Controlling codes	Return codes
Enable whiteboard	7F 08 99 A2 B3 C4 02 FF 01 07 CF	7F 09 99 A2 B3 C4 02 FF 01 07 01 CF
Display status	7F 08 99 A2 B3 C4 02 FF 01 09 CF	7F 09 99 A2 B3 C4 02 FF 01 09 01 CF
HDMI front / HDMI 1	7F 08 99 A2 B3 C4 02 FF 01 0A CF	7F 09 99 A2 B3 C4 02 FF 01 0A 01 CF
HDMI rear 1 / HDMI 2	7F 08 99 A2 B3 C4 02 FF 01 52 CF	7F 09 99 A2 B3 C4 02 FF 01 52 01 CF
HDMI rear 2 / HDMI 3	7F 08 99 A2 B3 C4 02 FF 01 53 CF	7F 09 99 A2 B3 C4 02 FF 01 53 01 CF
VGA	7F 08 99 A2 B3 C4 02 FF 01 54 CF	7F 09 99 A2 B3 C4 02 FF 01 54 01 CF
Type C	7F 08 99 A2 B3 C4 02 FF 01 58 CF	7F 09 99 A2 B3 C4 02 FF 01 58 01 CF
Internal PC	7F 08 99 A2 B3 C4 02 FF 01 38 CF	7F 09 99 A2 B3 C4 02 FF 01 38 01 CF
Internal SDM	7F 08 99 A2 B3 C4 02 FF 01 39 CF	7F 09 99 A2 B3 C4 02 FF 01 39 01 CF
DP	7F 08 99 A2 B3 C4 02 FF 01 56 CF	7F 09 99 A2 B3 C4 02 FF 01 56 01 CF
Page up	7F 08 99 A2 B3 C4 02 FF 01 13 CF	7F 09 99 A2 B3 C4 02 FF 01 13 01 CF
Page down	7F 08 99 A2 B3 C4 02 FF 01 14 CF	7F 09 99 A2 B3 C4 02 FF 01 14 01 CF
VOL -	7F 08 99 A2 B3 C4 02 FF 01 17 CF	7F 09 99 A2 B3 C4 02 FF 01 17 01 CF
VOL +	7F 08 99 A2 B3 C4 02 FF 01 18 CF	7F 09 99 A2 B3 C4 02 FF 01 18 01 CF
Menu	7F 08 99 A2 B3 C4 02 FF 01 1B CF	7F 09 99 A2 B3 C4 02 FF 01 1B 01 CF
Home page	7F 08 99 A2 B3 C4 02 FF 01 1C CF	7F 09 99 A2 B3 C4 02 FF 01 1C 01 CF
Return (exit)	7F 08 99 A2 B3 C4 02 FF 01 1D CF	7F 09 99 A2 B3 C4 02 FF 01 1D 01 CF
OK	7F 08 99 A2 B3 C4 02 FF 01 2B CF	7F 09 99 A2 B3 C4 02 FF 01 2B 01 CF
←	7F 08 99 A2 B3 C4 02 FF 01 2C CF	7F 09 99 A2 B3 C4 02 FF 01 2C 01 CF
→	7F 08 99 A2 B3 C4 02 FF 01 2D CF	7F 09 99 A2 B3 C4 02 FF 01 2D 01 CF

Function	Controlling codes	Return codes
↑	7F 08 99 A2 B3 C4 02 FF 01 2E CF	7F 09 99 A2 B3 C4 02 FF 01 2E 01 CF
↓	7F 08 99 A2 B3 C4 02 FF 01 2F CF	7F 09 99 A2 B3 C4 02 FF 01 2F 01 CF
Set volume	7F 08 99 A2 B3 C4 02 FF 05 XX CF	7F 09 99 A2 B3 C4 02 FF 05 XX 01 CF
Query the firmware version number	7F 08 99 A2 B3 C4 02 FF 01 3D CF	7F 09 99 A2 B3 C4 02 FF 01 3D XX CF
Set display mode	7F 08 99 A2 B3 C4 02 FF 06 XX CF	7F 09 99 A2 B3 C4 02 FF 06 XX 01 CF
Enable the annotation function	7F 08 99 A2 B3 C4 02 FF 01 40 CF	7F 09 99 A2 B3 C4 02 FF 01 40 01 CF
Increase backlight brightness	7F 08 99 A2 B3 C4 02 FF 01 47 CF	7F 09 99 A2 B3 C4 02 FF 01 47 01 CF
Decrease backlight brightness	7F 08 99 A2 B3 C4 02 FF 01 48 CF	7F 09 99 A2 B3 C4 02 FF 01 48 01 CF
Set the value of backlight brightness	7F 08 99 A2 B3 C4 02 FF 09 XX CF	7F 09 99 A2 B3 C4 02 FF 09 XX 01 CF
Switch backlight	7F 08 99 A2 B3 C4 02 FF 01 15 CF	7F 09 99 A2 B3 C4 02 FF 01 15 XX CF
Switch to screen lock	7F 08 99 A2 B3 C4 02 FF 01 57 CF	7F 09 99 A2 B3 C4 02 FF 01 57 01 CF
Screenshot	7F 08 99 A2 B3 C4 02 FF 01 1F CF	7F 09 99 A2 B3 C4 02 FF 01 1F 01 CF
Settings	7F 08 99 A2 B3 C4 02 FF 01 20 CF	7F 09 99 A2 B3 C4 02 FF 01 20 01 CF
Freeze ON/OFF toggle	7F 08 99 A2 B3 C4 02 FF 01 3B CF	7F 09 99 A2 B3 C4 02 FF 01 3B 01 CF
Freeze On	7F 09 99 A2 B3 C4 02 FF 0B 00 CF	7F 09 99 A2 B3 C4 02 FF 0B 00 01 CF

Function	Controlling codes	Return codes
Freeze Off	7F 09 99 A2 B3 C4 02 FF 0B 01 CF	7F 09 99 A2 B3 C4 02 FF 0B 01 01 CF
Mute On	7F 09 99 A2 B3 C4 02 FF 0F 00 CF	7F 09 99 A2 B3 C4 02 FF 0F 00 01 CF
Mute Off	7F 09 99 A2 B3 C4 02 FF 0F 01 CF	7F 09 99 A2 B3 C4 02 FF 0F 01 01 CF
Switch Safety Lock On	7F 09 99 A2 B3 C4 02 FF 0D 01 CF	7F 09 99 A2 B3 C4 02 FF 0D 01 01 CF
Switch Safety Lock Off	7F 09 99 A2 B3 C4 02 FF 0D 00 CF	7F 09 99 A2 B3 C4 02 FF 0D 00 01 CF
Switch Backlight On	7F 09 99 A2 B3 C4 02 FF 0E 01 CF	7F 09 99 A2 B3 C4 02 FF 0E 01 01 CF
Switch Backlight Off	7F 09 99 A2 B3 C4 02 FF 0E 00 CF	7F 09 99 A2 B3 C4 02 FF 0E 00 01 CF

Function	Querying codes	Return codes
Power supply	7F 08 99 A2 B3 C4 02 FF 01 37 CF	7F 09 99 A2 B3 C4 02 FF 01 37 XX CF Notes: XX indicates the power on/off state. XX = 01: power on state; XX = 00: power off state.
Speaker	7F 08 99 A2 B3 C4 02 FF 01 82 CF	7F 09 99 A2 B3 C4 02 FF 01 82 XX CF Notes: 01: mute; 00: non-mute.

Function	Querying codes	Return codes
Current signal source	7F 08 99 A2 B3 C4 02 FF 01 50 CF	7F 09 99 A2 B3 C4 02 FF 01 50 XX CF Notes: Smart system = 30; PC = 17; DP = 20; HDMI rear 1 = 1F; HDMI Rear 2 = 1E; VGA = 00; HDMI Front = 19; Type C = 22.
Speaker volume	7F 08 99 A2 B3 C4 02 FF 01 33 CF	7F 09 99 A2 B3 C4 02 FF 01 33 XX CF Notes: XX indicates current volume value (XX is a hexadecimal value, range: 00~64). For example, XX = 20 indicates current volume value is 32 (decimal value), XX = 00 indicates mute state.
D.Mode	7F 08 99 A2 B3 C4 02 FF 01 35 CF	7F 09 99 A2 B3 C4 02 FF 01 35 XX CF Notes: XX indicates the mode. XX = 00-standard; XX = 01-ECO mode; XX = 02-auto.
Backlight brightness	7F 08 99 A2 B3 C4 02 FF 01 49 CF	7F 09 99 A2 B3 C4 02 FF 01 49 XX CF Notes: XX indicates the value of backlight brightness (0 - 100), corresponding to the hexadecimal number system (00 - 64).
Backlight status	7F 08 99 A2 B3 C4 02 FF 01 81 CF	7F 09 99 A2 B3 C4 02 FF 01 81 XX CF Notes: XX = 00 indicates the backlight is on. XX = 01 indicates the backlight is off.

Function	Querying codes	Return codes
Screen lock status	7F 08 99 A2 B3 C4 02 FF 01 84 CF	7F 09 99 A2 B3 C4 02 FF 01 84 XX CF Notes: XX = 01 indicates the child safety lock is on. XX = 00 indicates the child safety lock is off.
Whiteboard state	7F 08 99 A2 B3 C4 02 FF 01 83 CF	7F 09 99 A2 B3 C4 02 FF 01 83 XX CF Notes: XX = 01 indicates the whiteboard state. XX = 00 indicates non-whiteboard state.
Return to system state of the previous options	7F 08 99 A2 B3 C4 02 FF 0A 00 CF	7F 08 99 A2 B3 C4 02 FF 0A 00 AB CD EF GH IJ OP QR ST UV CF Notes: AB: Power supply; CD: Speaker; EF: Current signal source; GH: Speaker volume; IJ: D.Mode; OP: backlight brightness; QR: backlight state; ST: Whiteboard state; UV: Screen lock state.

Symptom	Troubleshooting Methods
The panel cannot be powered on or the power indicator light is off.	<ul style="list-style-type: none"> • Check whether the power supply is connected. • Check whether the power supply plug is properly connected. • Check whether the power outlet has electricity. • Check whether the rocker switch is enabled. • Press the reset switch and start the system again.
The remote control is not causing a response.	<ul style="list-style-type: none"> • Replace the batteries. • Check whether the polarity direction of the batteries is correct. • Align the remote control with the IR receiver window. For details, see section "Remote Control".
The image is normal but there is no sound.	<ul style="list-style-type: none"> • Increase volume on both the screen and the Windows system. • Check whether the screen and the Windows system are muted. • If an external computer is connected, check whether the connection cables are normal.
The system is automatically powered on/off when no operation is being performed.	<ul style="list-style-type: none"> • Disable the automatic power-on/off function. For details, see section "Power ON/OFF Setting". • Check whether the screen entered shut down mode due to no operation for an extended period of time. • Check whether the input power supply is stable.
The colors of images are abnormal.	Check whether the HDMI cable is properly connected or has any quality issue.
The touch function is abnormal or the positioning is inaccurate.	<ul style="list-style-type: none"> • Restart the screen. • In the Windows system, recalibrate the screen. For details, see section "Calibration".
The touch function is unavailable when the external signal source channel is being used.	<ul style="list-style-type: none"> • Switch between different external signal sources. • Ensure that the USB touch cable is connected to the proper port. For details, see section "Ports". • Remove and insert the USB touch cable again.
There is no sound when the HDMI in channel is used.	Remove and insert the HDMI cable again.

Symptom	Troubleshooting Methods
No image is displayed when the HDMI out channel is used.	<ul style="list-style-type: none"> • Generally, this issue is caused by the compatibility of the external display product. Replace the external display product and test again. • The HDMI cable is too long or has a poor quality. Replace the HDMI cable delivered with the product.
The touch function on the front panel is ineffective.	<ul style="list-style-type: none"> • Touch the button using your full fingertip. • Check whether the finger is wet or has other liquids on it. • Restart the screen.
The USB flash drive cannot be identified.	Check whether the USB flash drive is inserted into the correct USB port. For details, see section "Ports."
The conference records cannot be saved on the USB flash drive, and the system prompts "The target storage product has no write permissions."	Format the USB flash drive to the FAT32 format.
The OPS has no signal.	<ul style="list-style-type: none"> • Check whether the OPS is properly inserted in the slot. • Check whether the OPS is in shut down mode. • Press the power button on the OPS (for details, see the instructions of the OPS), and manually start up the OPS.
In the embedded operating system or Windows system, no wireless network can be found or the wireless network signal is weak.	<ul style="list-style-type: none"> • Check whether the Wi-Fi antenna is properly installed on the embedded operating system. For details, see section "Ports". • Check whether the Wi-Fi antenna is properly installed for the OPS.
The keyboard is not correctly displayed.	Confirm that the hardware keyboard is enabled.
When you connect a handheld microphone to a port on the front panel, the distance from user to microphone should be no less than 1 meter, otherwise the sound may distort.	The front panel doesn't support handheld microphone, and needs to use the fixed microphone. To make sure of the sound quality, the distance from user to microphone should be no less than one meter.

Symptom	Troubleshooting Methods
<p>When the touch screen connects to CEC facilities and powers down, touch screen will stay in shut down mode after power restart. CEC facilities can't recall the touch screen.</p>	<p>Please use the remote control to start and turn off the touch screen. Then you can use the CEC facilities to recall it.</p>

Model	TT-6522Q	TT-7522Q	TT-8622Q
Display			
Backlight	LED		
Display Area	56.22 in x 31.61 in/ 1428 x 803mm	64.96 in x 36.54 in/ 1650 x 928mm	74.61 in x 41.97 in/ 1895 x 1066mm
Active Screen Size	65 inch	75 inch	86 inch
Display Ratio	16:9		
Resolution	3840 x 2160 Pixel		
Display Colors	8 bit+FRC, 1.07 billion colors	8 bit+FRC, 1.07 billion colors	10 bit, 1.07 billion colors
Brightness	≥ 400 cd/m²		
Contrast	Dynamic 5000:1 Static 4000:1		
Response Time	Typ. 8ms, Max. 10ms		
Life Time	≥50000 h (Min.)		
Speaker			
Speaker Position	Forward + Back		
Max. Power Output	Full Amplifier 2 x 20 W + Woofer 1 x 15W		
Microphone			
Type	3.5 mm interface		
Electrical			
Power Consumption	Maximum ≤ 600 W Standby Mode ≤ 0.5 W	Maximum ≤ 670 W Standby Mode ≤ 0.5 W	Maximum ≤ 700 W Standby Mode ≤ 0.5 W
Working Voltage	AC100-240V Max 6.0A		

Model	TT-6522Q	TT-7522Q	TT-8622Q
Touch			
Touch Surface	Anti-Glare, Anti-Fingerprint, Antimicrobial Tempered Glass		
Transparency	88%±3%		
Touch Points	Windows 40 Points Android 32 Points(Max.)		
Writing Tools	Eraser, Stylus or Finger		
Scan Speed	≤10ms		
Communication Interface	USB-A		
Transportation/Storage			
Storage Temperature/ Humidity	-20~60°C/0~90%RH (Non-condensing)		
Working Temperature/ Humidity	0°C-40°C/20%80%RH(Non-condensing)		
Mounting (optional)	Wall-mounted/Floor Stand		
Outline Dimension	1513 x 926 x 116 mm	1735x1050x116mm	1981 x1190x116mm
Packing Dimension	1640 x 1036 x 207 mm	1859 x 1160 x 227 mm	2119 x 1290 x 250 mm
Net Weight	approx. 39kg	approx. 50kg	approx. 65kg
Gross Weight	49±1kg	64±1kg	82±1kg
Ports			
Front Interface Inputs	HDMI In x 1, USB (Touch) x 1, USB 3.0 x 1, Microphone In x 1, Type C x 1		
Rear Interface Inputs	RS-232 x 1, Line Out x 1, SPDIF out x 1, HDMI Out x 1, USB 3.0 (Public) x 2, USB 3.0 (Android) x 1, Type C x 1, USB3.0 (Touch) x 3, HDMI 2/3 In x 2, DP x 1, OPS Slot x 1 (4K@60Hz), SDM Slot x 1		
Other functions			
Intelligent thermos protector	Yes		

Model	TT-6522Q	TT-7522Q	TT-8622Q
Smart System			
Chips	Amlogic A311D2		
RAM	Standard with 8G		
Flash	128GB (Onboard 64GB + SD Card 64GB)		
Multimedia File Formats	Supports all major types of multi-media files		
Pre-installed applications	Refer to the actual panel display.		
Wi-Fi Module			
Parameters	Wi-Fi 6 +BT 5.2		
Camera Module			
Camera Resolution	4K@ 30 Hz /UHD		
Field of View	120° FOV Lenses		
Resolution	8M		
Camera Tile Range	15°		
Firmware Version	V1.1.67		

More Information

For more information

Please visit our website (www.newline-interactive.com/eu) for detailed instruction manual.

Contact Us for Support

Please email us at support_eu@newline-interactive.com.

Please keep this Manual properly for future reference!

This manual is a general manual, the pictures are for reference only, please refer to the real product.

Our company is devoted to product innovation and technology enhancement. Therefore, we may change product specification and information without notice. Product pictures in the manual are for reference only, please refer to actual products.